FORM MS–5054–09/13/2007
REPLACES FORM MS–5054–06/20/2007
FILE IN SECT. 2 OF SERVICE MANUAL

Illustrated Parts List

Model Series

123K00

TYPE NUMBERS
0005 through 3717.

TABLE OF CONTENTS

Alternator 6
Air Cleaner 4
Blower Housing/Shrouds 5
Camshaft 2
Carburetor 3
Controls 4
Crankshaft 2
Cylinder 2
Electric Starter 6
Electrical 6
Engine Sump 2
Exhaust System 4
Flywheel 6
Flywheel Brake 6
Fuel Supply 4
Governor Spring 4
Ignition 6
Kits/Gaskets . . . . . 2 & 3
Lubrication 2
Piston Group 2
Rewind Starter 6
Valves 2

BRIGGS & STRATTON ®

PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

123K00

1319 WARNING LABEL

REQUIRED *when replacing parts with warning labels affixed.*

1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL

1019 LABEL KIT

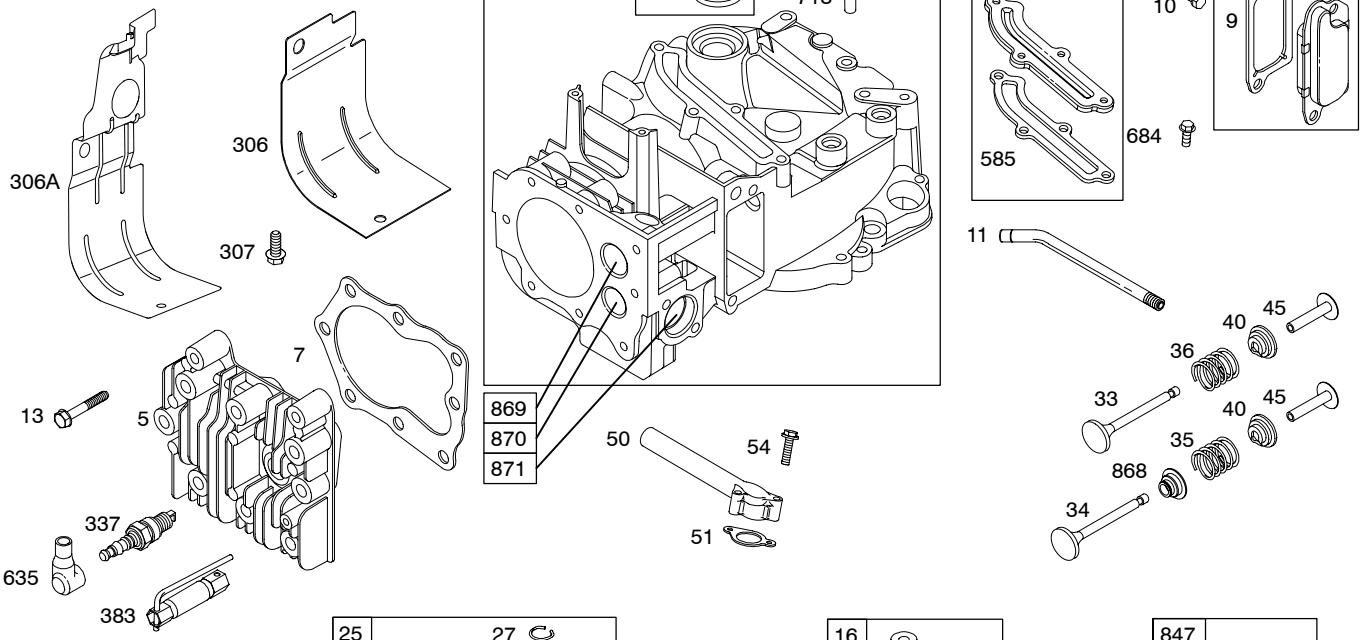

1095 VALVE GASKET SET

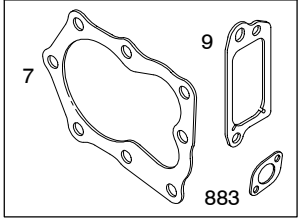

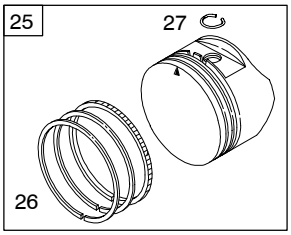



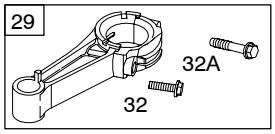

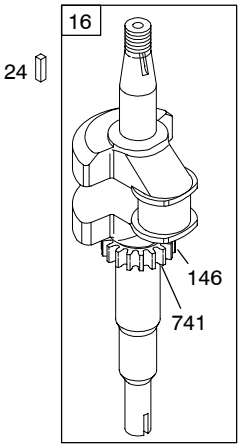

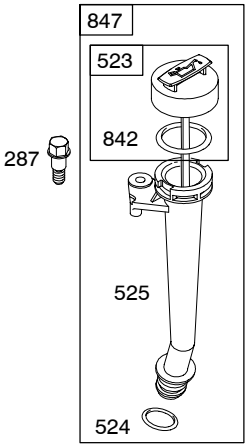

358 ENGINE GASKET SET

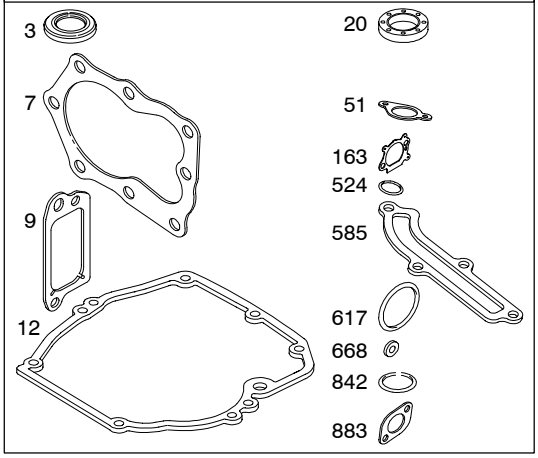

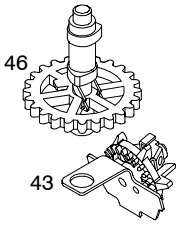



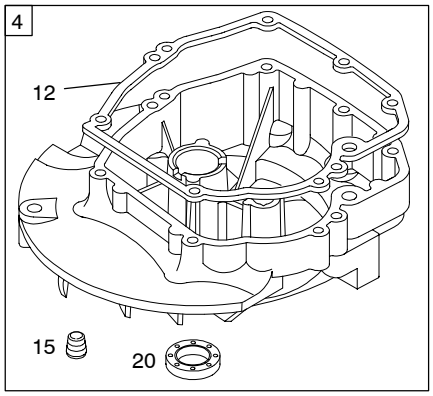

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

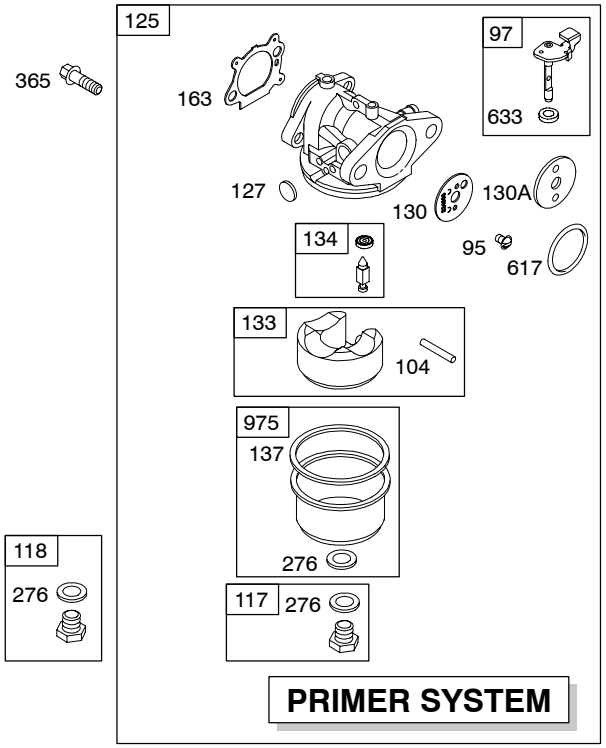

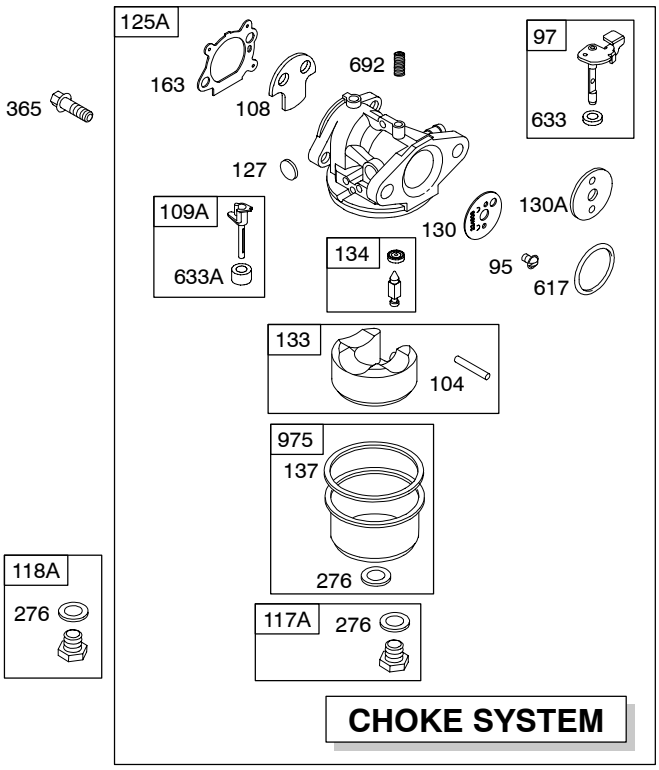

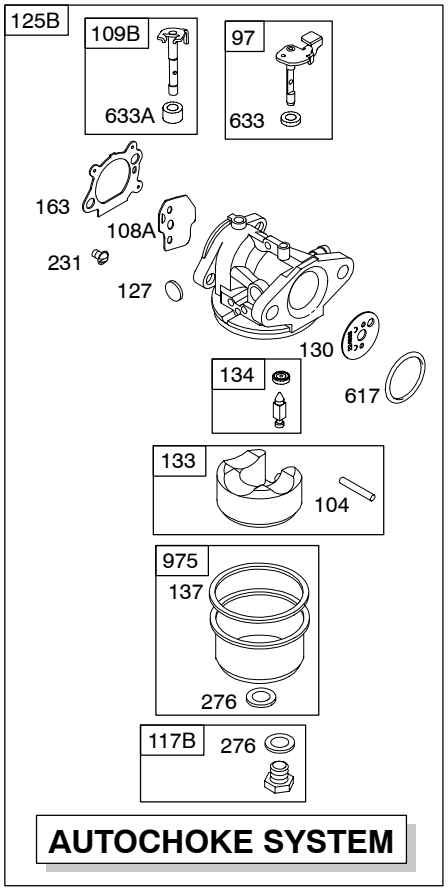

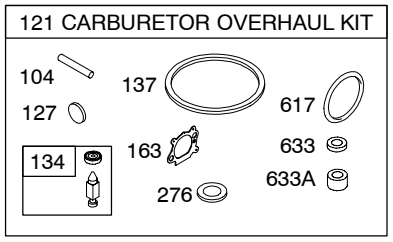

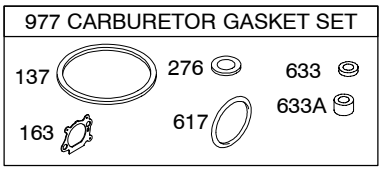

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

123K00

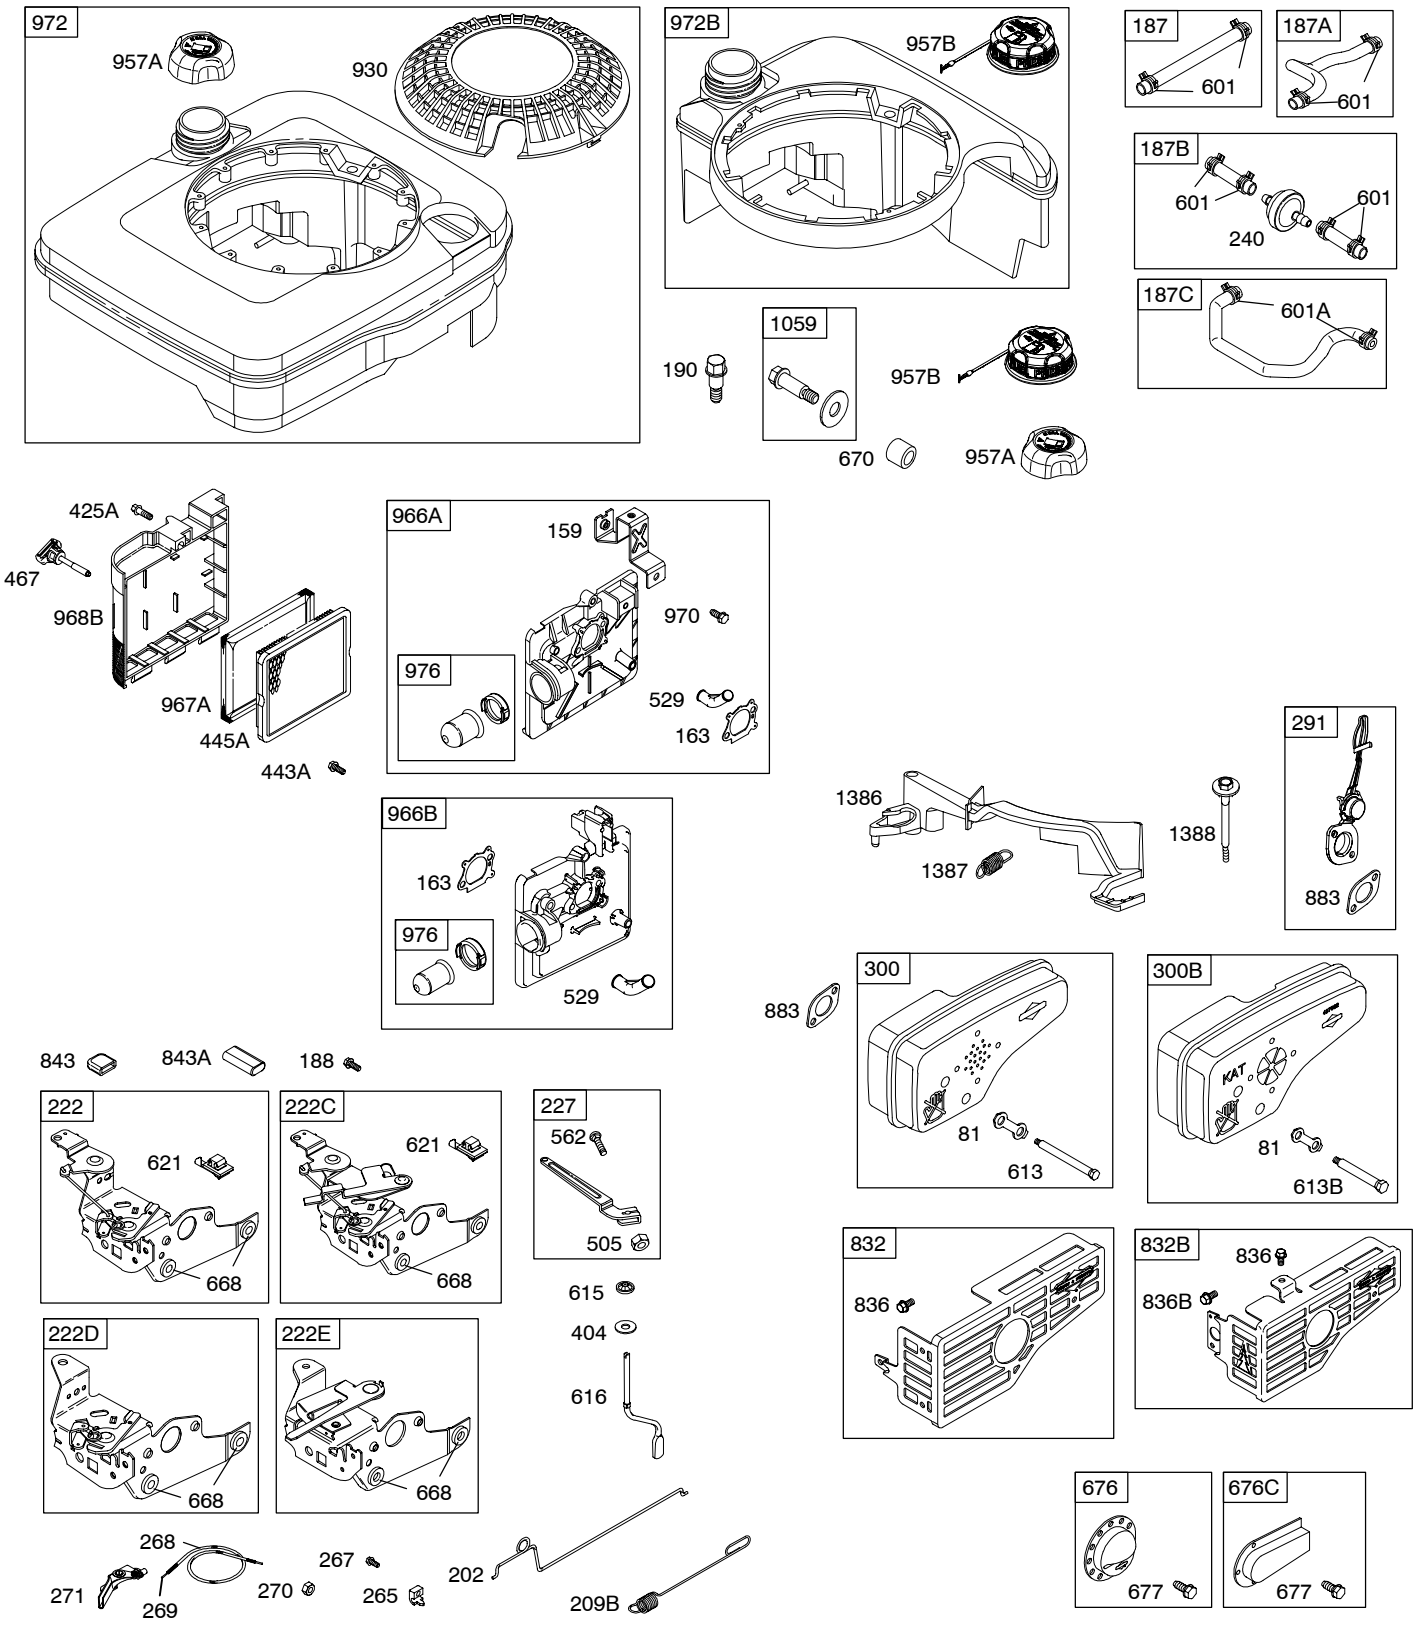

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

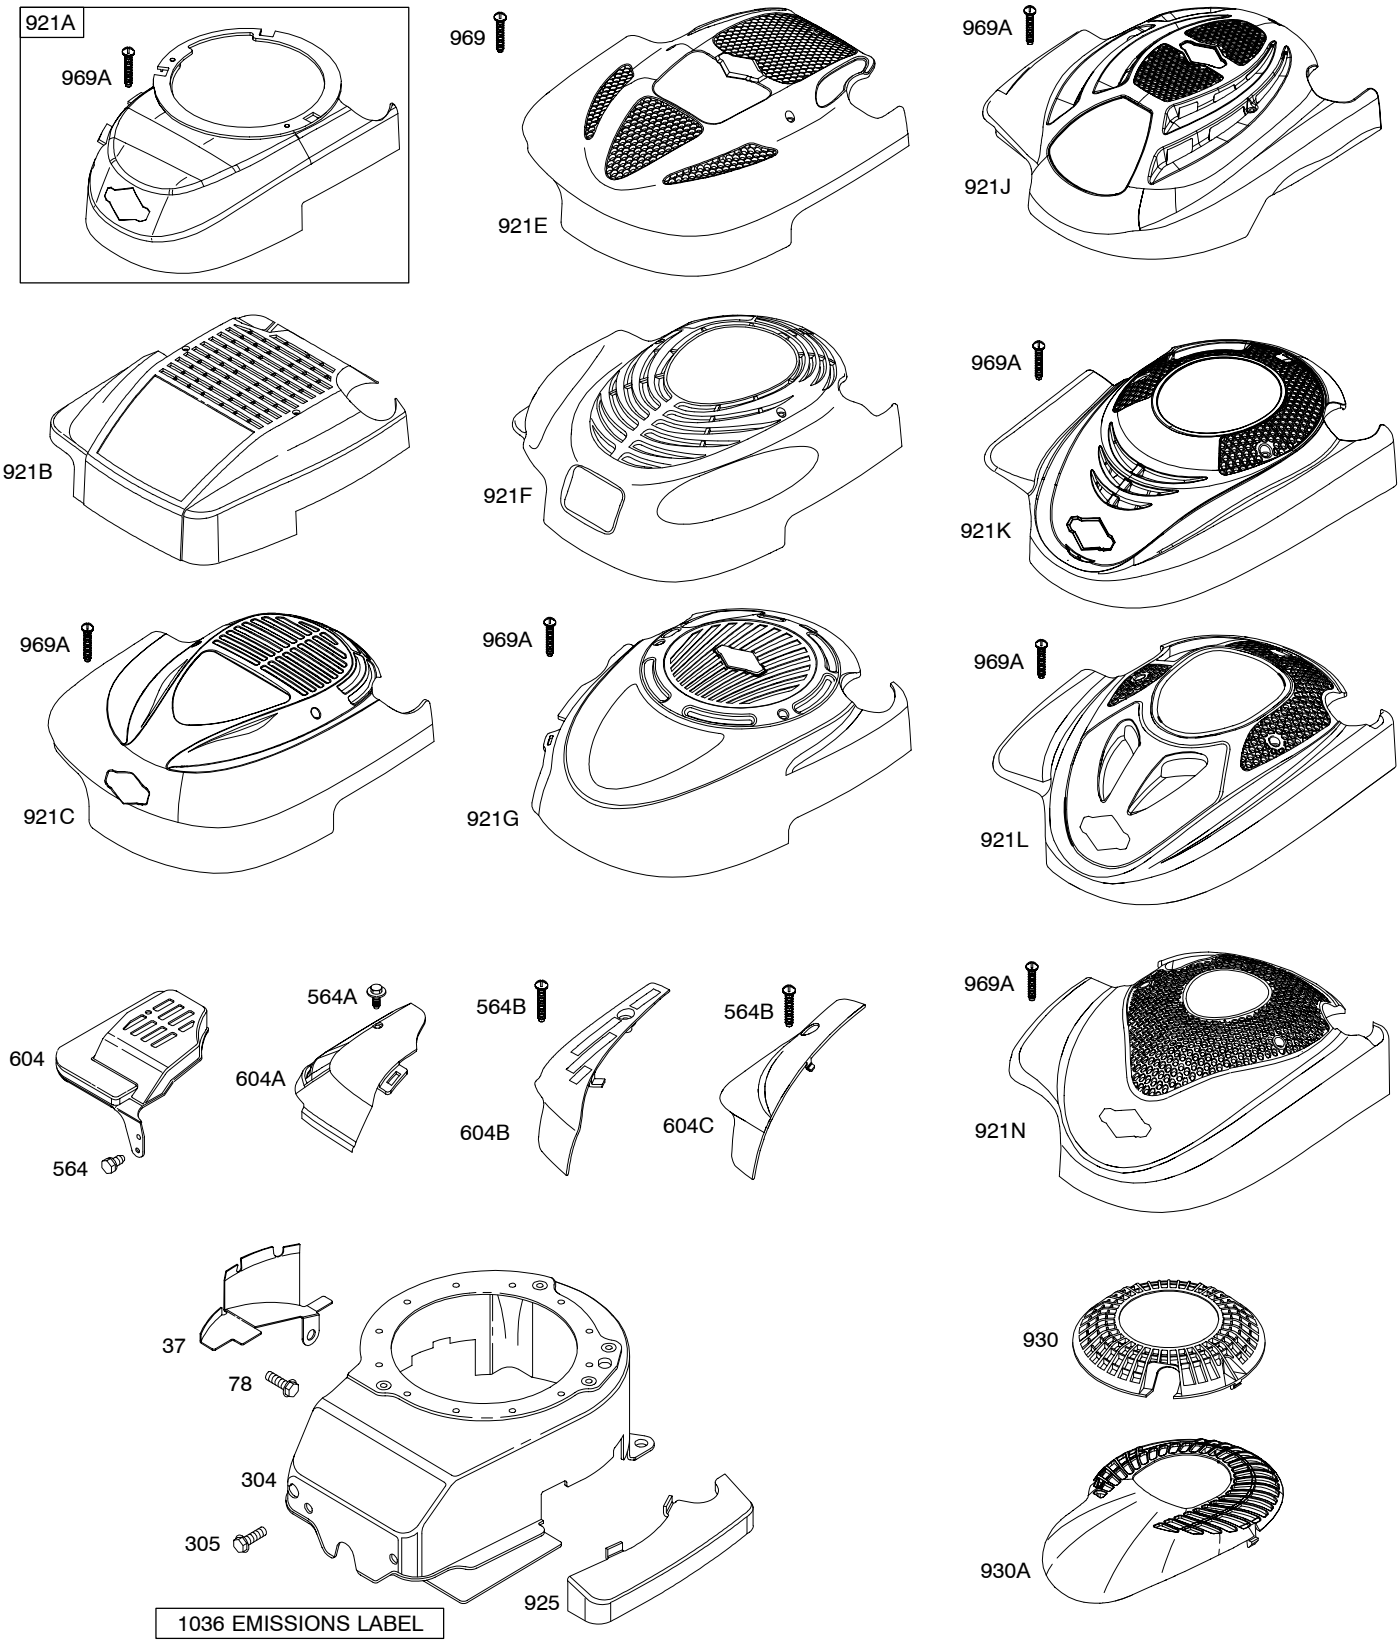

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

123K00

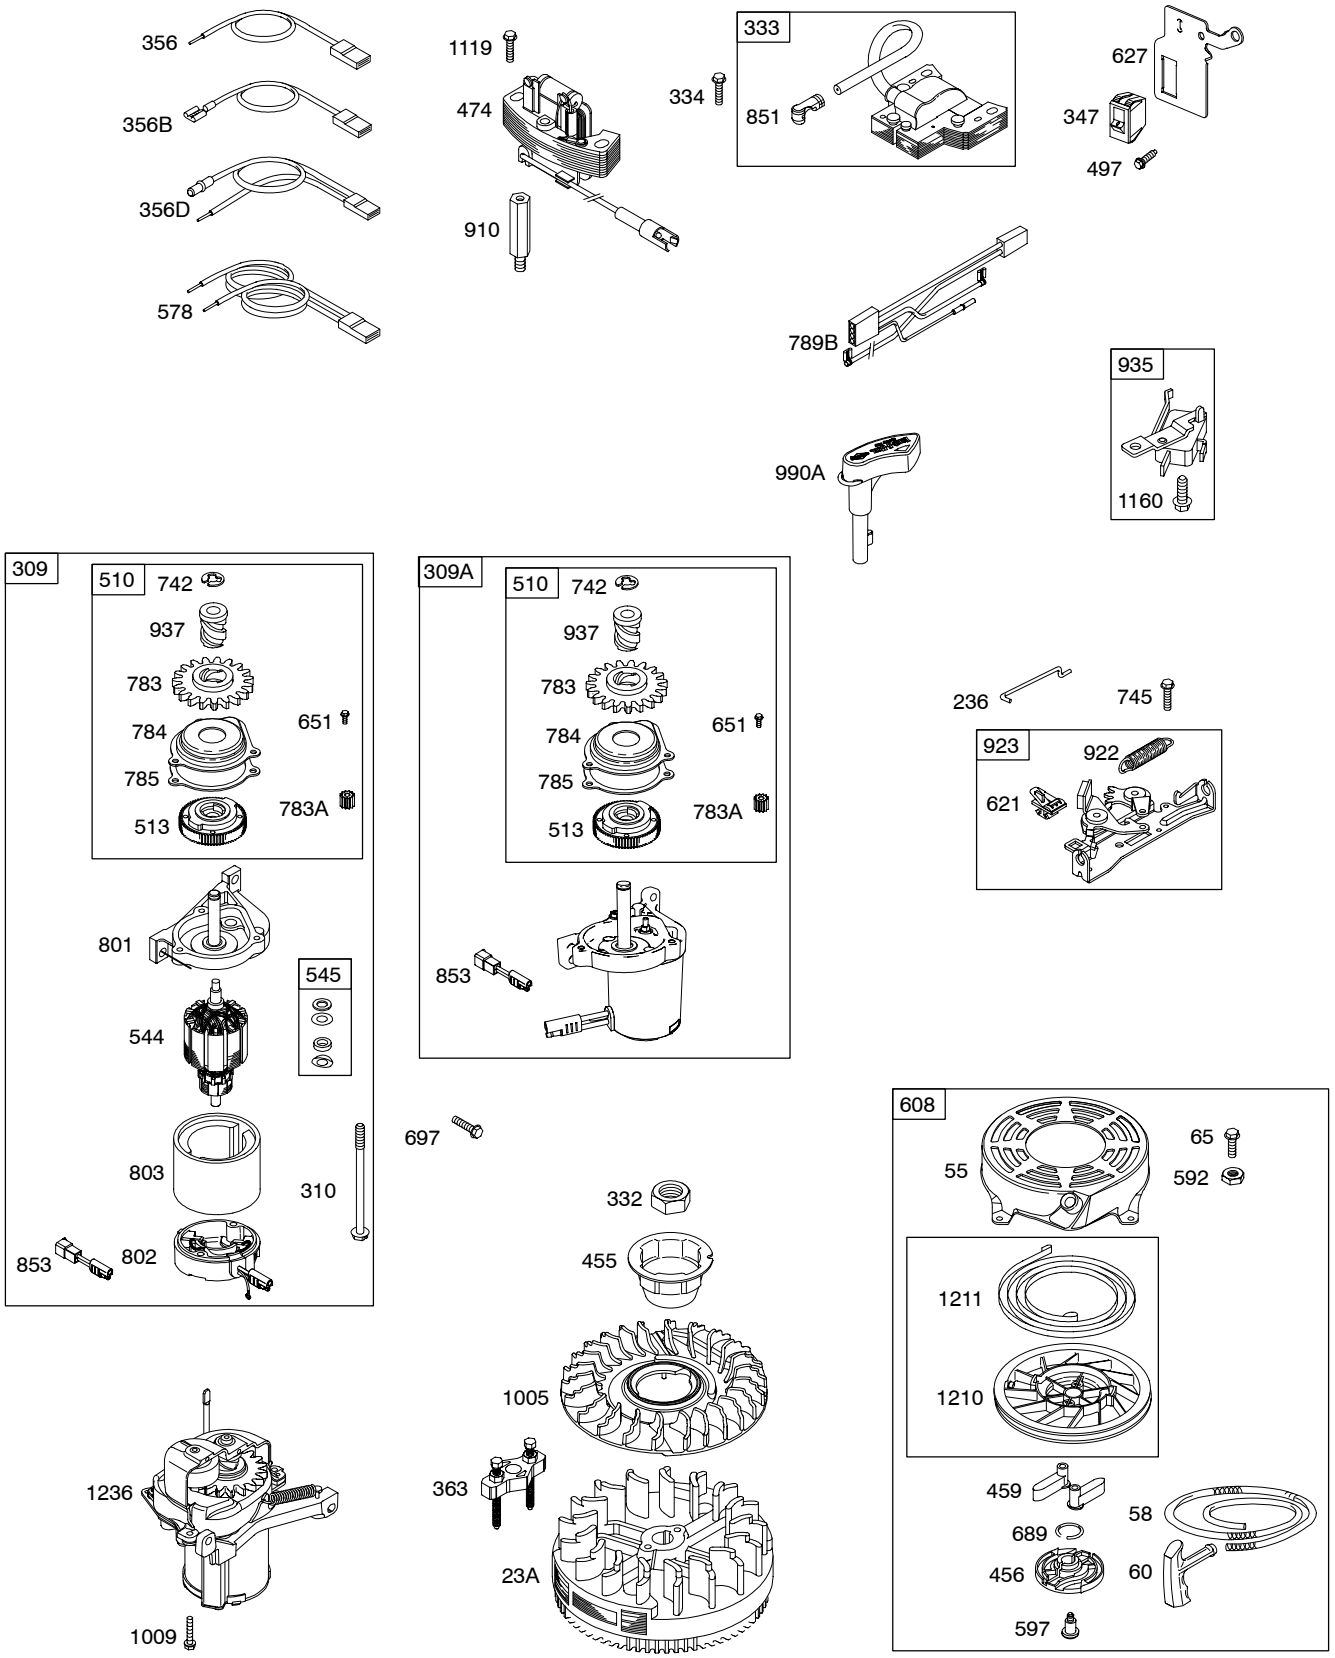

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly
2	399269	Kit–Bushing/Seal (Magneto Side)
3	★299819S	Seal–Oil (Magneto Side)
4	493279	Sump–Engine –––––– **Note** ––––– **696294** Sump–Engine Used on Type No(s). 0121, 0194, 0244. **498983** Sump–Engine Used on Type No(s). 0131, 0134, 0138.
5	691160	Head–Cylinder
7	★∅692249	Gasket–Cylinder Head
8	695250	Breather Assembly
9	★∅696125	Gasket–Breather
10	691125	Screw (Breather Assembly)
11	691781	Tube–Breather
12	★692232	Gasket–Crankcase
13	690912	Screw (Cylinder Head)
15	691680	Plug–Oil Drain (Square Socket)
16	691450	Crankshaft –––––– **Note** ––––– **691451** Crankshaft Used on Type No(s). 0015, 0060, 0062, 0107, 0116, 0117, 0120, 0121, 0127, 0139, 0145, 0147, 0181, 0183, 0184, 0185, 0193, 0194, 0195, 0196, 0197, 0208, 0209, 0210, 0217, 0218, 0222, 0223, 0224, 0225, 0226, 0230, 0231, 0232, 0235, 0237, 0239, 0244, 0261, 0266, 0271, 0273, 0277, 0283, 0307, 0336, 0515, 0560, 0615. **696009** Crankshaft Used on Type No(s). 0114. **691455** Crankshaft Used on Type No(s). 0018, 0126, 0131, 0134, 0138, 0219, 0230, 0234, 0238, 0243, 0289, 0518. **694849** Crankshaft Used on Type No(s). 0005, 0137, 0156, 0236, 0269. **694478** Crankshaft Used on Type No(s). 0240, 0332. **696290** Crankshaft Used on Type No(s). 0113, 0130. **694850** Crankshaft Used on Type No(s). 0132, 0509.
20	★399781S	Seal–Oil (PTO Side)
22	691092	Screw (Crankcase Cover/ Sump)
23A	691987	Flywheel –––––– **Note** ––––– **691992** Flywheel Used on Type No(s). 0005, 0113, 0130, 0131, 0132, 0134, 0137, 0138, 0156, 0236, 0238, 0269, 0509. **696291** Flywheel Used on Type No(s). 0121, 0194, 0244.
24	222698S	Key–Flywheel
25	791097	Piston Assembly (Standard) –––––– **Note** ––––– **791326** Piston Assembly (.020” Oversize) (Used After Code Date 04102100). **697341** Piston Assembly (.020” Oversize) (Used Before Code Date 04102200). (.010” Oversize) **697342** Piston Assembly (.030” Oversize)
26	791098	Ring Set (Standard) (Used After Code Date 04031400). –––––– **Note** ––––– **499425** Ring Set (Standard) (Used Before Code Date 04031500). **791324** Ring Set (.020” Oversize) (Used After Code Date 04102100). **499427** Ring Set (.020” Oversize) (Used Before Code Date 04102200).

★ Included in Engine Gasket Set–Ref. No.358.
● Included in Carburetor Overhaul Kit–Ref. No. 121.
◆ Included in Carburetor Gasket Set–Ref. No. 977.
∅ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

123K00

REF. NO.	PART NO.	DESCRIPTION
28	499423	Pin–Piston (Standard)
29	499424	Rod–Connecting (Standard)
32	691664	Screw (Connecting Rod)
32A	695759	Screw (Connecting Rod)
33	262651S	Valve–Exhaust
34	262652S	Valve–Intake
35	691270	Spring–Valve (Intake)
36	691270	Spring–Valve (Exhaust)
37	694086	Guard–Flywheel
40	692194	Retainer–Valve
43	691997	Slinger–Governor/Oil
45	690548	Tappet–Valve
46	691449	Camshaft
50	497465	Manifold–Intake
51	★272199S	Gasket–Intake
54	691650	Screw (Intake Manifold)
55	691421	Housing–Rewind Starter
58	697316	Rope–Starter (Cut To Required Length)
60	281434S	Grip–Starter Rope
65	690837	Screw (Rewind Starter)
78	691108	Screw (Flywheel Guard)
81	691740	Lock–Muffler Screw
95	691636	Screw (Throttle Valve)
97	493267	Shaft–Throttle (Metal)
		------- **Note** -----
		696565 Shaft–Throttle (Plastic)
104	●691242	Pin–Float Hinge
108	691182	Valve–Choke
108A	790844	Valve–Choke
109A	498593	Shaft–Choke
109B	790843	Shaft–Choke
117	498978	Jet–Main (Standard)
		------- **Note** -----
		494870 Jet–Main (Standard) Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562, 0563, 0666, 0717, 3717.
117A	498978	Jet–Main (Standard)
		------- **Note** -----
		498981 Jet–Main (Standard) Used on Type No(s). 0005, 0113, 0130, 0131, 0134, 0137, 0138, 0236, 0238, 0240, 0269, 0332, 0509.
117B	697355	Jet–Main (Standard)
118	497466	Jet–Main (High Altitude)
		------- **Note** -----
		497315 Jet–Main (High Altitude) Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562, 0563, 0666, 0717, 3717.
118A	497466	Jet–Main (High Altitude)
		------- **Note** -----
		494870 Jet–Main (High Altitude) Used on Type No(s). 0005, 0113, 0130, 0131, 0134, 0137, 0138, 0236, 0238, 0240, 0269, 0332, 0509.
118B	692677	Jet–Main (High Altitude)
121	498260	Kit–Carburetor Overhaul
125	498170	Carburetor (Primer System)
		------- **Note** -----
		790821 Carburetor (Primer System) Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562, 0563, 0666, 0717, 3717.
125A	499059	Carburetor (Choke System)
		------- **Note** -----
		792253 Carburetor (Choke System) Used on Type No(s). 0005, 0113, 0130, 0131, 0134, 0137, 0138, 0236, 0238, 0240, 0269, 0332, 0509.
125B	790845	Carburetor (Autochoke System)
127	●694468	Plug–Welch
130	696564	Valve–Throttle
130A	691203	Valve–Throttle
133	398187	Float–Carburetor
134	●398188	Kit–Needle/Seat
137	●◆693981	Gasket–Float Bowl
146	690979	Key–Timing
159	691753	Bracket–Air Cleaner Primer
163	★●◆272653	Gasket–Air Cleaner

★ Included in Engine Gasket Set–Ref. No.358.
● Included in Carburetor Overhaul Kit–Ref. No. 121.
◆ Included in Carburetor Gasket Set–Ref. No. 977.
∅ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION
187	**791766**	Line–Fuel (Cut to Required Length)
187A	**791873**	Line–Fuel (Molded)
187B	**791891**	Line–Fuel (Includes Filter) (Used After Code Date 05063000).
		------- **Note** -----
	692042	Line–Fuel (Includes Filter) (Used Before Code Date 05070100).
187C	**791875**	Line–Fuel (Molded)
188	**693399**	Screw (Control Bracket)
190	**690940**	Screw (Fuel Tank)
202	**691829**	Link–Mechanical Governor
209B	**699056**	Spring–Governor
		------- **Note** -----
	691292	Spring–Governor Used on Type No(s). 0114, 0116, 0117, 0125, 0237, 0243, 0277, 0301, 0302, 0307, 0311, 0337, 0338, 0347, 0424, 0425, 0438, 0440, 0484, 0490, 0511, 0513.
	691851	Spring–Governor Used on Type No(s). 0119, 0122, 0123, 0124, 0135, 0141, 0153, 0154, 0156.
	691852	Spring–Governor Used on Type No(s). 0121,0142.
	691290	Spring–Governor Used on Type No(s). 0005, 0134, 0138, 0145, 0236, 0269.
	691291	Spring–Governor Used on Type No(s). 0113, 0126, 0130, 0131, 0132, 0137, 0240, 0332, 0509.
	790944	Spring–Governor Used on Type No(s). 0238.
222	**790143**	Bracket–Control (Remote/Manual Friction)(Primer)
222C	**692150**	Bracket–Control (Variable Speed) (5 Postion Manual Choke)
222E	**692982**	Bracket–Control (Manual Friction, 5 Postion Manual Choke)
222D	**692467**	Bracket–Control (Fixed Speed)
		------- **Note** -----
	791128	Bracket–Control (Fixed Speed) Used on Type No(s). 0145, 0154, 0478, 0479, 0481, 0576, 0582, 0587, 0589, 0592, 0609, 0611, 0613, 0618, 0630, 0631, 0639, 0657, 0664, 0665, 0666, 0674, 0717, 3717.
227	**690783**	Lever–Governor Control
231	**691636**	Screw (Choke Valve)
236	**691826**	Link–Lockout
240	**298090S**	Filter–Fuel
265	**690798**	Clamp–Casing
267	**691044**	Screw (Casing Clamp)
268	**691025**	Casing–Control Wire (Cut to Required Length)
269	**691026**	Wire–Control (Cut to Required Length)
270	**691027**	Nut (Control Wire Casing)
271	**691028**	Lever–Control
276	●◆**271716**	Washer–Sealing (Main Jet)
287	**690940**	Screw (Dipstick Tube)
291	**790830**	Thermostat
300	**692038**	Muffler
		------- **Note** -----
	790828	Muffler Used on Type No(s). 0478, 0479, 0481, 0592, 0611, 0615, 0625, 0630, 0664, 0665, 0674.
300B	**694048**	Muffler (Super Lo Tone Catalyst)

★ Included in Engine Gasket Set–Ref. No.358.
● Included in Carburetor Overhaul Kit–Ref. No. 121.
◆ Included in Carburetor Gasket Set–Ref. No. 977.
∅ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

123K00

REF. NO.	PART NO.	DESCRIPTION
304	**695892**	Housing–Blower
		–––––––Note –––––
		493293 Housing–Blower Used on Type No(s). 0015, 0018, 0025, 0060, 0062, 0107, 0113, 0114, 0117, 0120, 0127, 0130, 0131, 0132, 0134, 0138, 0147, 0153, 0184, 0210, 0218, 0223, 0225, 0302, 0330, 0515, 0518, 0525, 0560, 0562, 0587, 0589, 0611, 0717, 3717.
		493294 Housing–Blower Used on Type No(s). 0005, 0126, 0134, 0137, 0156, 0236, 0238, 0240, 0269, 0332, 0509.
		696298 Housing–Blower Used on Type No(s). 0121, 0194, 0244.
		790826 Housing–Blower Used on Type No(s). 0479, 0481, 0592, 0615, 0625, 0630, 0664, 0665.
		790983 Housing–Blower Used on Type No(s). 0478, 0674.
		694092 Housing–Blower Used on Type No(s). 0145.
305	**691108**	Screw (Blower Housing)
306	**690450**	Shield–Cylinder
306A	**790836**	Shield–Cylinder
307	**690345**	Screw
309	**695550**	Motor–Starter (Used Before Code Date 07052900).
309A	**795092**	Motor–Starter (Used After Code Date 07052800).
		(Cylinder Shield)
310	**692327**	Bolt (Starter Motor)
332	**690662**	Nut (Flywheel)
333	**802574**	Armature–Magneto
		––––––– Note –––––
		790817 Armature–Magneto Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562, 0563, 0615, 0625, 0666, 0717, 3717.
334	**691061**	Screw (Magneto Armature)
337	**802592S**	Plug–Spark (Resistor)
		––––––– Note –––––
		697451 Plug–Spark (EMS)
347	**691396**	Switch–Rocker
356	**692390**	Wire–Stop
356B	**693010**	Wire–Stop
356D	**496381**	Wire–Stop
358	**497316**	Gasket Set–Engine
363	**19069**	Flywheel Puller
365	**691688**	Screw (Carburetor)
383	**89838S**	Wrench–Spark Plug
404	**690272**	Washer (Governor Crank)
425A	**690670**	Screw (Air Cleaner Cover)
443A	**692523**	Screw (Air Cleaner Primer Base)
445A	**491588S**	Filter–Air Cleaner Cartridge
455	**791960**	Cup–Flywheel
456	**692299**	Plate–Pawl Friction
459	**281505S**	Plate–Ratchet
467	**790842**	Knob–Air Cleaner
474	**691991**	Alternator
497	**690664**	Screw (Stopswitch Bracket)
505	**691251**	Nut (Governor Control Lever)
510	**795093**	Drive–Starter
513	**692358**	Clutch–Drive
523	**499621**	Dipstick
524	**★692296**	Seal–Dipstick Tube
525	**495265**	Tube–Dipstick
529	**691923**	Grommet
544	**690786**	Armature–Starter
545	**492919**	Washer Set
562	**92613**	Bolt (Governor Control Lever)
564	**690664**	Screw (Control Cover)
564A	**691142**	Screw (Control Cover)
564B	**698589**	Screw (Control Cover)
578	**398153**	Wire Assembly
584	**697734**	Cover–Breather Passage
585	**★691879**	Gasket–Breather Passage
592	**690800**	Nut (Rewind Starter)
597	**691696**	Screw (Pawl Friction Plate)
601	**791850**	Clamp–Hose
601A	**691038**	Clamp–Hose
604	**691757**	Cover–Control
604A	**691344**	Cover–Control
604B	**790703**	Cover–Control
604C	**792418**	Cover–Control
608	**497680**	Starter–Rewind
613	**691340**	Screw (Muffler)
		––––––– Note –––––
		790833 Screw (Muffler) Used on Type No(s). 0478, 0479, 0481, 0592, 0611, 0615, 0625, 0630, 0664, 0665, 0674.
613B	**691114**	Screw (Muffler)

★ Included in Engine Gasket Set–Ref. No.358.
● Included in Carburetor Overhaul Kit–Ref. No. 121.
◆ Included in Carburetor Gasket Set–Ref. No. 977.
∅ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION
615	690340	Retainer–Governor Shaft
616	698801	Crank–Governor
617★●◆	270344	Seal–O Ring (Intake Manifold)
621	692310	Switch–Stop
627	692872	Bracket–Stopswitch
		------- **Note** -----
		792565 Bracket–Stop Switch Used on Type No(s). 0156, 0238, 0509.
633	●◆691321	Seal–Choke/Throttle Shaft
633A	●◆693867	Seal–Choke/Throttle Shaft
635	66538S	Boot–Spark Plug
651	691660	Screw (Starter Gear Cover)
668	★493823	Spacer
670	692294	Spacer–Fuel Tank
676	396548	Deflector–Muffler (Louvered)
676C	493871	Deflector–Muffler (Side Out) (Extended)
677	690661	Screw (Muffler Deflector)
684	690345	Screw (Breather Passage Cover)
689	691855	Spring–Friction
692	690572	Spring–Detent
697	691127	Screw (Drive Cap)
718	690959	Pin–Locating
741	790345	Gear–Timing (Use Without Woodruff Key)
		------- **Note** -----
		691830 Gear–Timing (Uses Woodruff Key)
742	93941	Retainer–E Ring
745	691648	Screw (Brake)
783	691918	Gear–Pinion
783A	691269	Gear–Pinion
784	795095	Cover–Starter Gear
785	692352	Gasket–Starter Cover
789B	696547	Harness–Wiring
801	690782	Cap–Drive
802	695267	Cap–End
803	695266	Housing–Starter
832	499034	Guard–Muffler
832B	497683	Guard–Muffler (Super Lo Tone Catalyst)
836	690664	Screw (Muffler Guard)
836B	691147	Screw (Muffler Guard)
842	★691031	Seal–O Ring (Dipstick Tube)
843	691884	Sleeve–Lever (Control Bracket)
843A	691895	Sleeve–Lever (Choke)
847	692047	Dipstick/Tube Assembly
851	493880S	Terminal–Spark Plug
853	695268	Adapter–Wire
868	697338	Seal–Valve
869	691155	Seat–Valve (Intake)
870	690380	Seat–Valve (Exhaust)
871	262001	Bushing–Valve Guide (Exhaust)
		------- **Note** -----
		63709 Bushing–Valve Guide (Intake)
883	★∅691881	Gasket–Exhaust
910	691094	Stud (Alternator)
921A	695886	Cover–Blower Housing
921B	692931	Cover–Blower Housing
921C	695889	Cover–Blower Housing
921E	696262	Cover–Blower Housing
921F	697343	Cover–Blower Housing
921G	790701	Cover–Blower Housing
921J	790036	Cover–Blower Housing
921K	699984	Cover–Blower Housing
921L	791026	Cover–Blower Housing
921N	792675	Cover–Blower Housing
922	691831	Spring–Brake
		------- **Note** -----
		692135 Spring–Brake Used on Type No(s). 0101, 0116, 0119, 0122, 0123, 0124, 0125, 0135, 0139, 0141, 0142, 0154, 0181, 0183, 0185, 0193, 0195, 0196, 0197, 0208, 0209, 0217, 0219, 0222, 0224, 0226, 0230, 0231, 0232, 0234, 0235, 0237, 0239, 0243, 0258, 0261, 0266, 0267, 0268, 0271, 0277, 0281, 0283, 0289, 0301, 0306, 0307, 0309, 0311, 0312, 0313, 0314, 0315, 0324, 0326, 0327, 0328, 0329, 0336, 0337, 0338, 0347, 0350, 0357, 0424, 0425, 0438, 0440, 0444, 0447, 0450, 0454, 0456, 0479, 0481, 0484, 0490, 0498, 0501, 0507, 0508, 0511, 0513, 0541, 0547, 0563, 0564, 0576, 0582, 0592, 0609, 0613, 0615, 0618, 0625, 0630, 0631, 0639, 0657, 0664, 0665, 0666.

★ Included in Engine Gasket Set–Ref. No.358.
● Included in Carburetor Overhaul Kit–Ref. No. 121.
◆ Included in Carburetor Gasket Set–Ref. No. 977.
∅ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

123K00

REF. NO.	PART NO.	DESCRIPTION
923	**691994**	Brake
		-------Note -----
		695891 Brake Used on Type No(s). 0101, 0116, 0119, 0122, 0123, 0124, 0125, 0135, 0139, 0141, 0142, 0154, 0181, 0183, 0185, 0193, 0195, 0196, 0197, 0208, 0209, 0217, 0219, 0222, 0224, 0226, 0230, 0231, 0232, 0234, 0235, 0237, 0239, 0243, 0258, 0261, 0266, 0267, 0268, 0271, 0277, 0281, 0283, 0289, 0301, 0306, 0307, 0309, 0311, 0312, 0313, 0314, 0315, 0324, 0326, 0327, 0328, 0329, 0336, 0337, 0338, 0347, 0350, 0357, 0424, 0425, 0438, 0440, 0444, 0447, 0450, 0454, 0456, 0479, 0481, 0484, 0490, 0498, 0501, 0507, 0508, 0511, 0513, 0541, 0547, 0563, 0564, 0576, 0582, 0592, 0609, 0613, 0615, 0618, 0625, 0630, 0631, 0639, 0657, 0664, 0665, 0666.
925	**690595**	Cover–Linkage
930	**691919**	Guard–Rewind (Round)
930A	**691345**	Guard–Rewind (Tear Drop)
935	**499421**	Switch–Interlock
937	**691325**	Spline–Starter
957A	**692046**	Cap–Fuel Tank (Plastic)
957B	**699985**	Cap–Fuel Tank (Plastic)
966A	**496116**	Base–Air Cleaner Primer
966B	**792040**	Base–Air Cleaner Primer
967A	**493537S**	Filter–Pre Cleaner
968B	**692298**	Cover–Air Cleaner
969	**690700**	Screw (Blower Housing Cover)
969A	**691138**	Screw (Blower Housing Cover)
970	**691669**	Screw (Air Cleaner Primer Bracket)
972	**699392**	Tank–Fuel (Plastic)
972B	**699374**	Tank–Fuel (Plastic)
		------- Note -----
		699387 Tank–Fuel (Plastic) Used on Type No(s). 0121, 0194, 0244.
975	**493640**	Bowl–Float
976	**694395**	Primer–Carburetor
977	**498261**	Gasket Set–Carburetor
990A	**695951**	Key Set
1005	**691346**	Fan–Flywheel
1009	**696255**	Screw (Starter Motor)
1019	**494256**	Kit–Label
		------- Note -----
		790231 Kit–Label (Touch N Mow)
1036		Label–Emissions (Available From A Briggs & Statton Authorized Dealer)
1058	**277039**	Operator's Manual
		------- Note -----
		277101 Operator's Manual (Touch N Mow)
1059	**692311**	Kit–Screw/Washer
		------- Note -----
		696293 Kit–Screw/ Washer (Touch N Mow)
1095	**498528**	Gasket Set–Valve
1119	**692979**	Screw (Alternator)
1160	**690345**	Screw (Interlock Switch)
1210	**498144**	Pulley/Spring Assembly (Pulley)
1211	**498144**	Pulley/Spring Assembly (Spring)
1236	**695959**	Starter–Machanical (Touch N Mow) (Do Not Service Individual Parts, Only As A Whole)
1319	**794467**	Label–Warning
1330	**270962**	Manual–Repair
1386	**790848**	Vane–Air (Autochoke System)
1387	**790849**	Spring–Air Vane
1388	**790850**	Screw (Air Vane)

★ Included in Engine Gasket Set–Ref. No.358.
● Included in Carburetor Overhaul Kit–Ref. No. 121.
◆ Included in Carburetor Gasket Set–Ref. No. 977.
∅ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.