FORM MS10332-Rev G-08/21/2015
REPLACES FORM MS10332-Rev F-05/30/2015
FILE IN SECT. 2 OF SERVICE MANUAL

Illustrated Parts List

Model Series

126M00

TYPE NUMBERS
0001 through 6863.

TABLE OF CONTENTS

Air Cleaner 4
Blower Housing 8
Blower Housing/Shrouds 7
Camshaft 2
Carburetor 3
Controls 6
Crankshaft 2
Cylinder 2
Electric Starter 9
Electrical . . . . . 6&8
Engine Sump 2
Exhaust System 4
Flywheel 8
Flywheel Brake 6
Fuel Supply 5
Governor Spring 6
Ignition 8
Kits/Gaskets 9
Lubrication 2
Piston Group 2
Rewind Starter 8
Valves 2

Not for Reproduction

PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

126M00

1319 WARNING LABEL

1330 REPAIR MANUAL

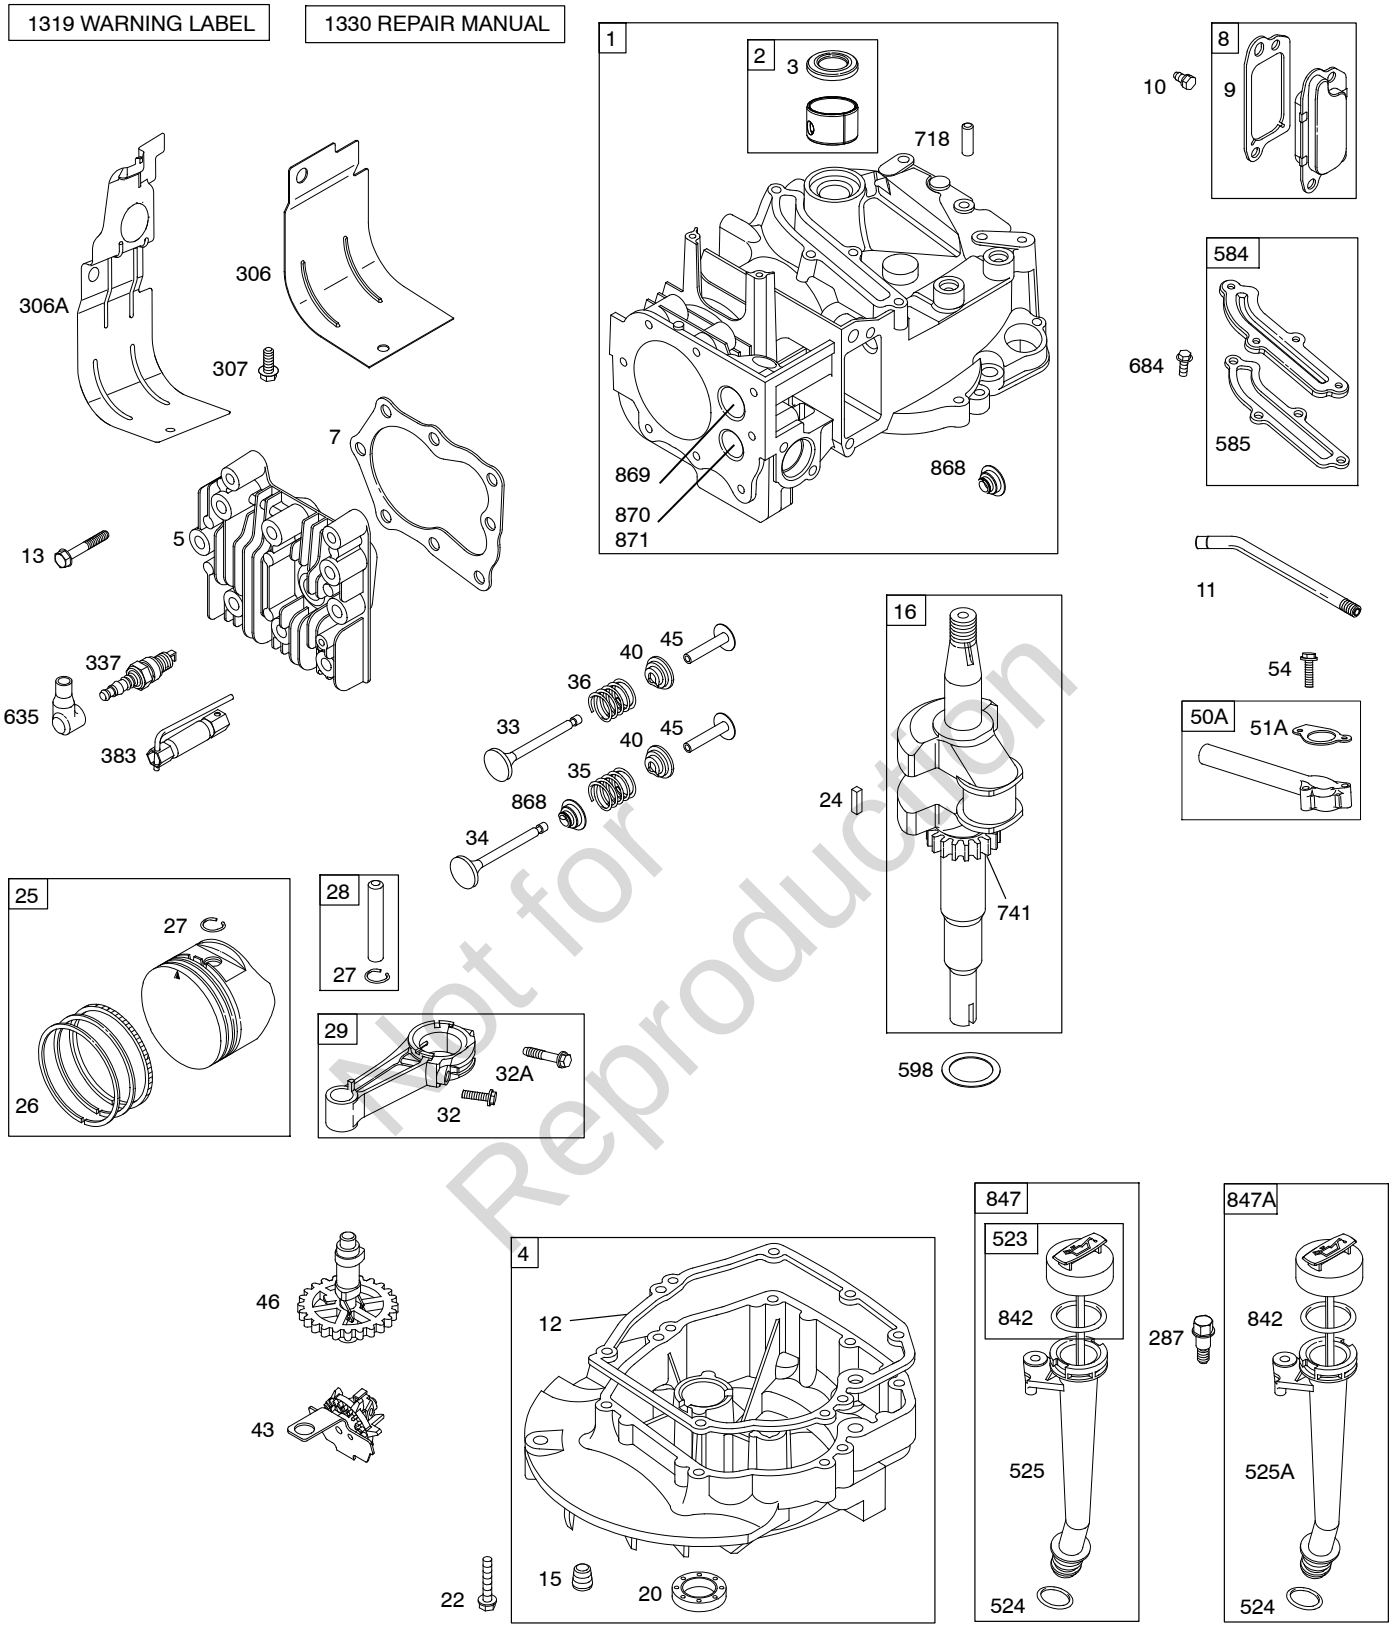

Not for Reproduction

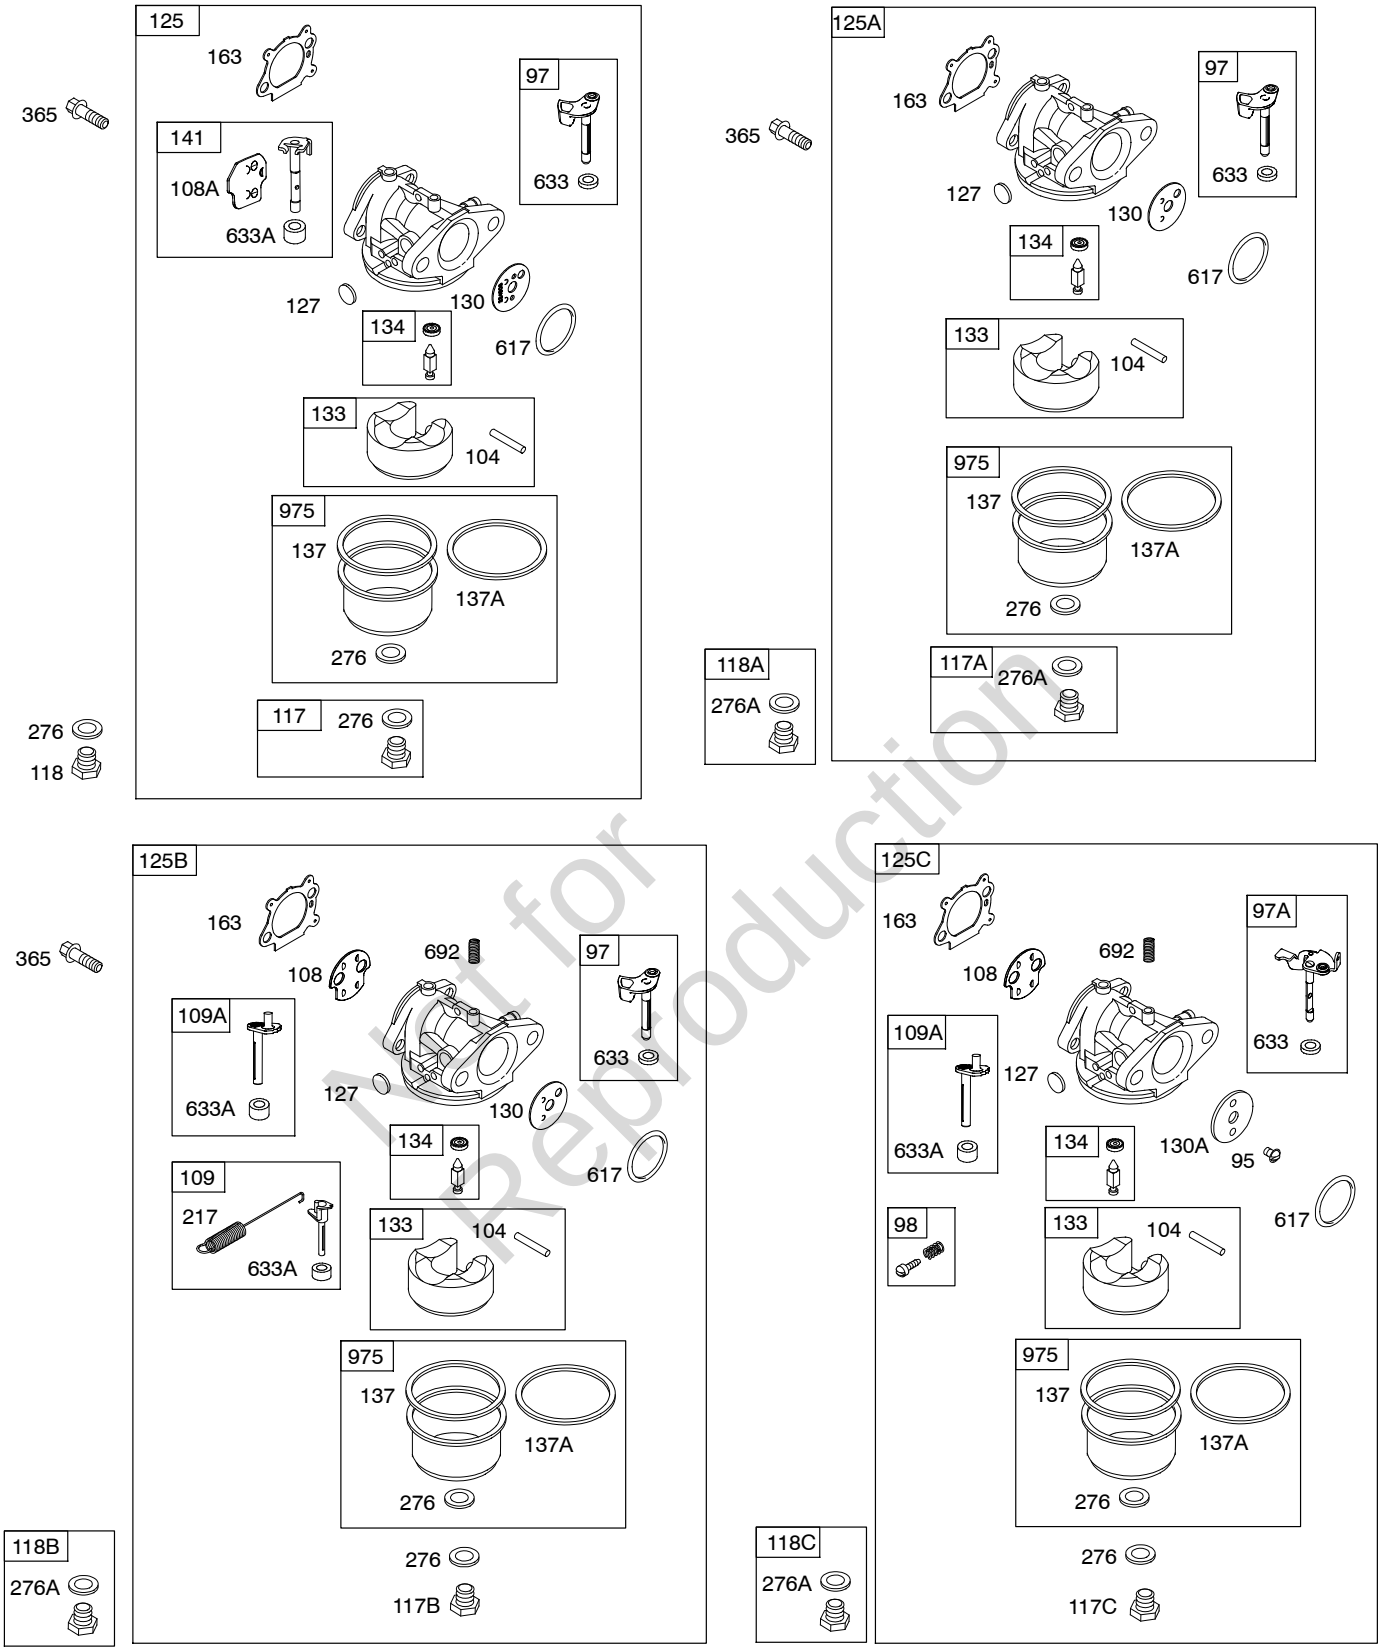

Not for Reproduction

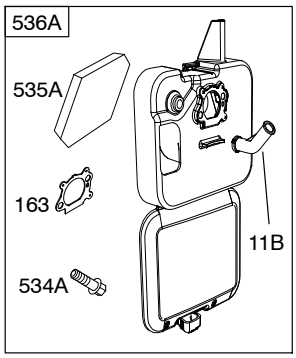

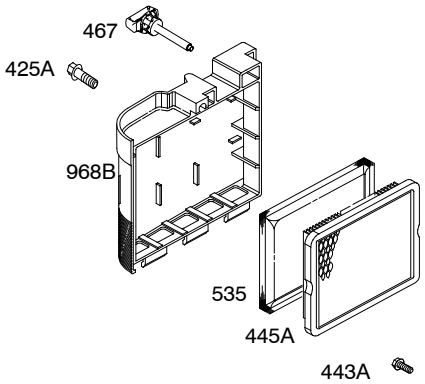

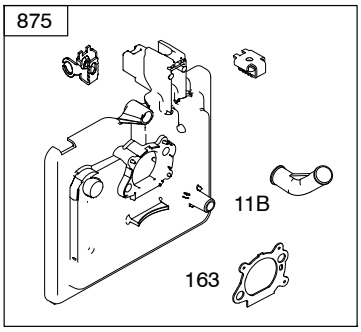

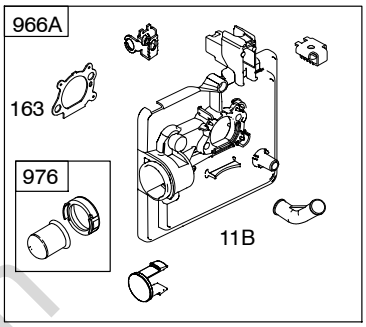

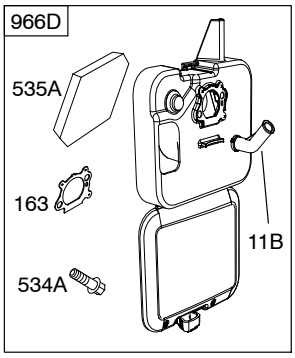

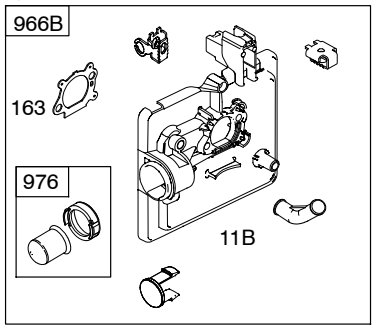

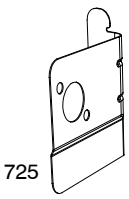

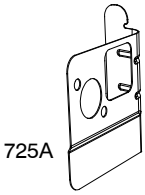

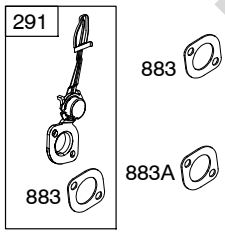

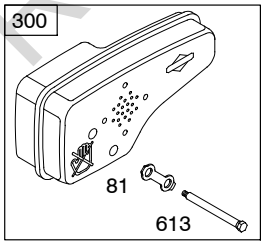

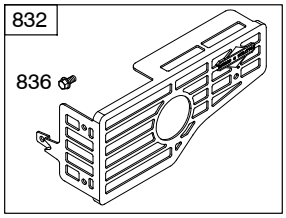

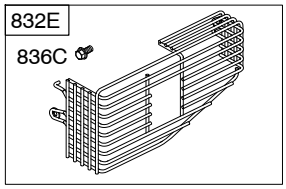

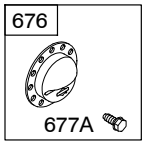

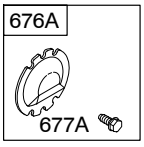

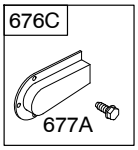

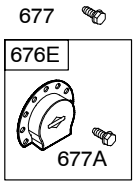

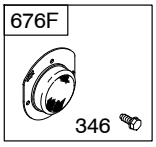

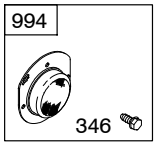

Not for Reproduction

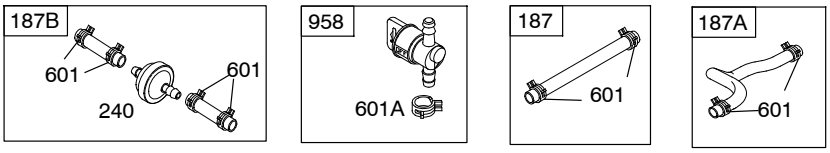

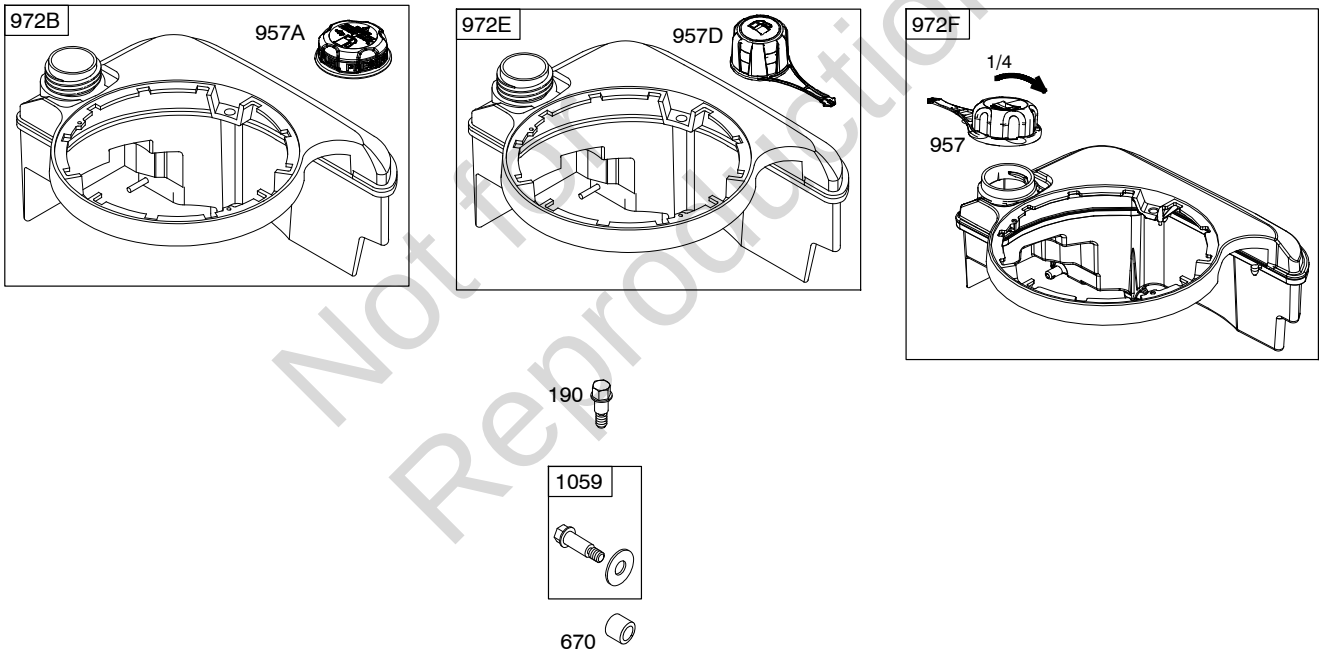

Not for Reproduction

126M00

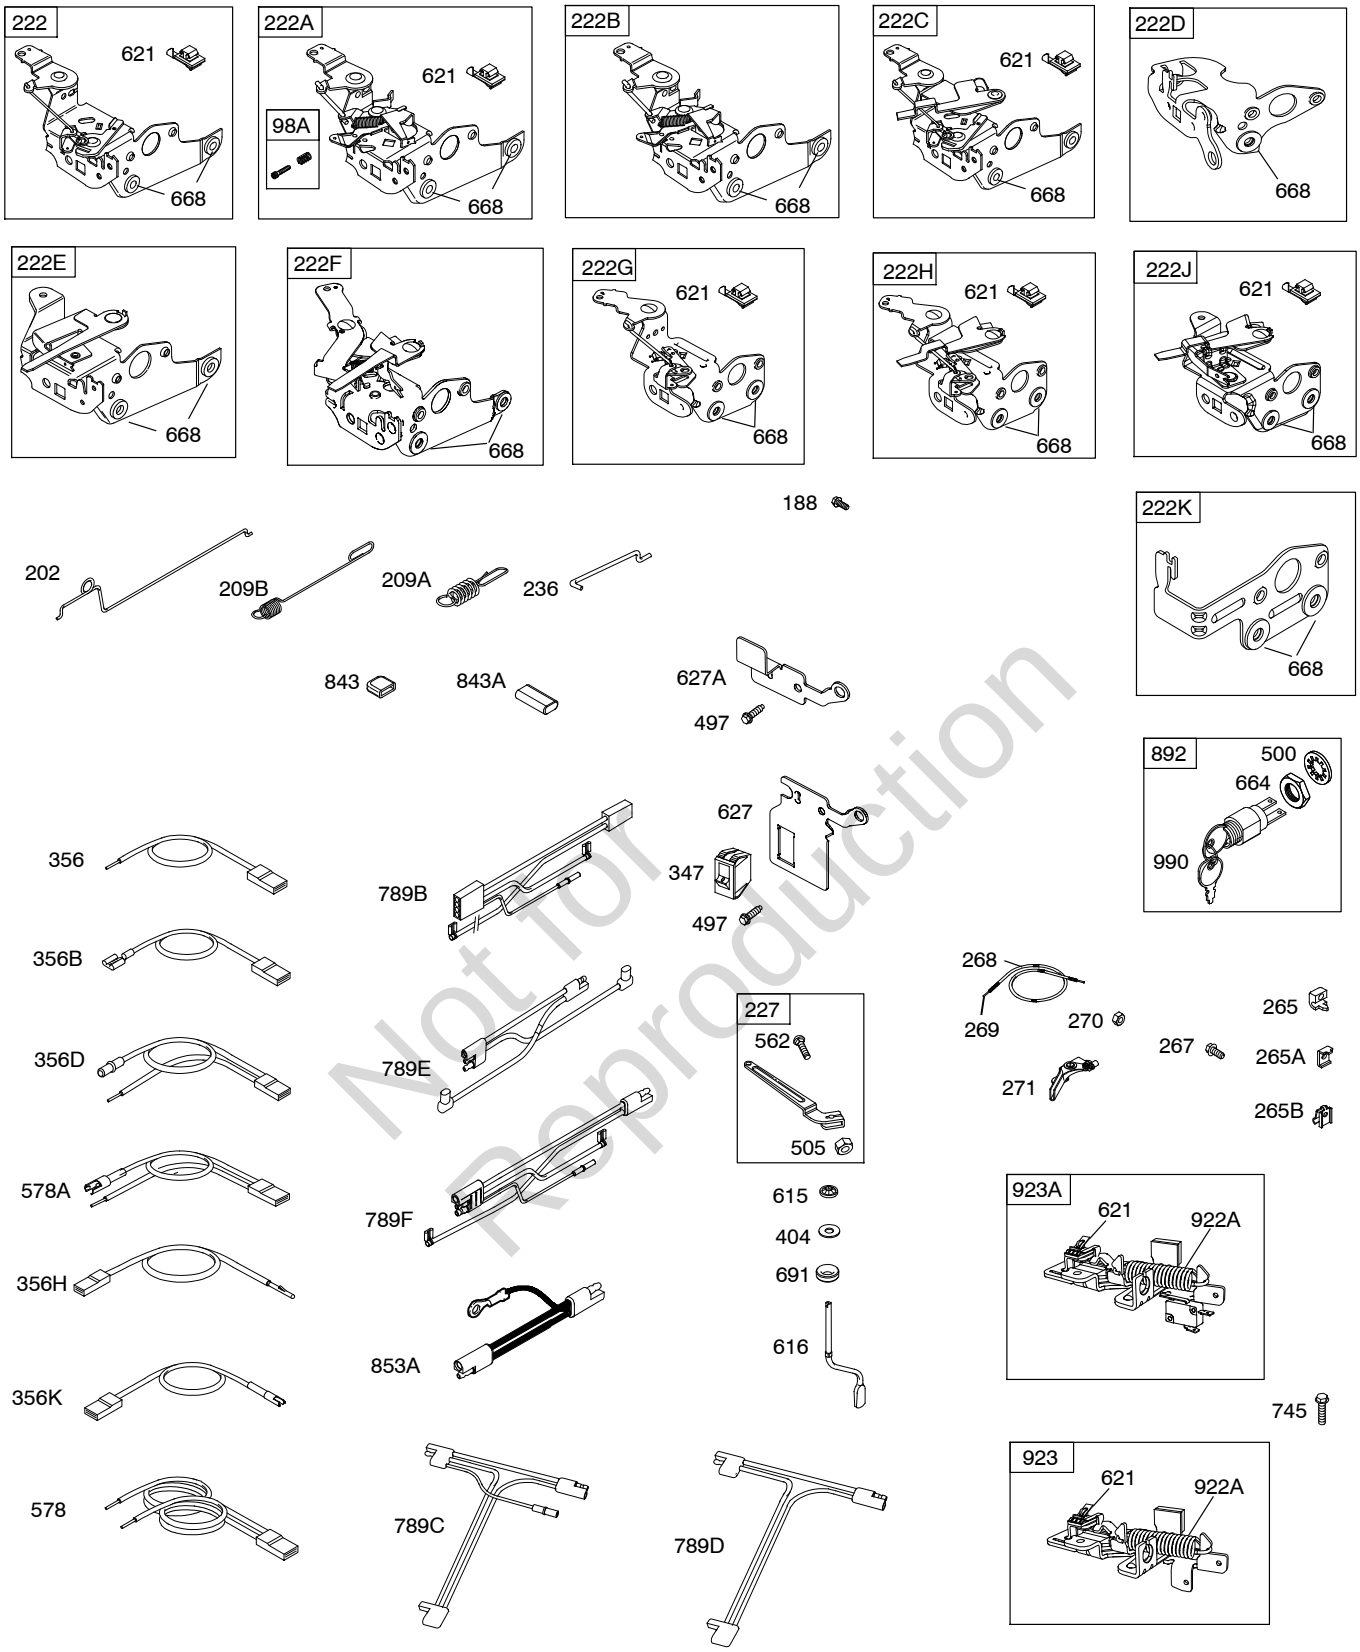

Not for Reproduction

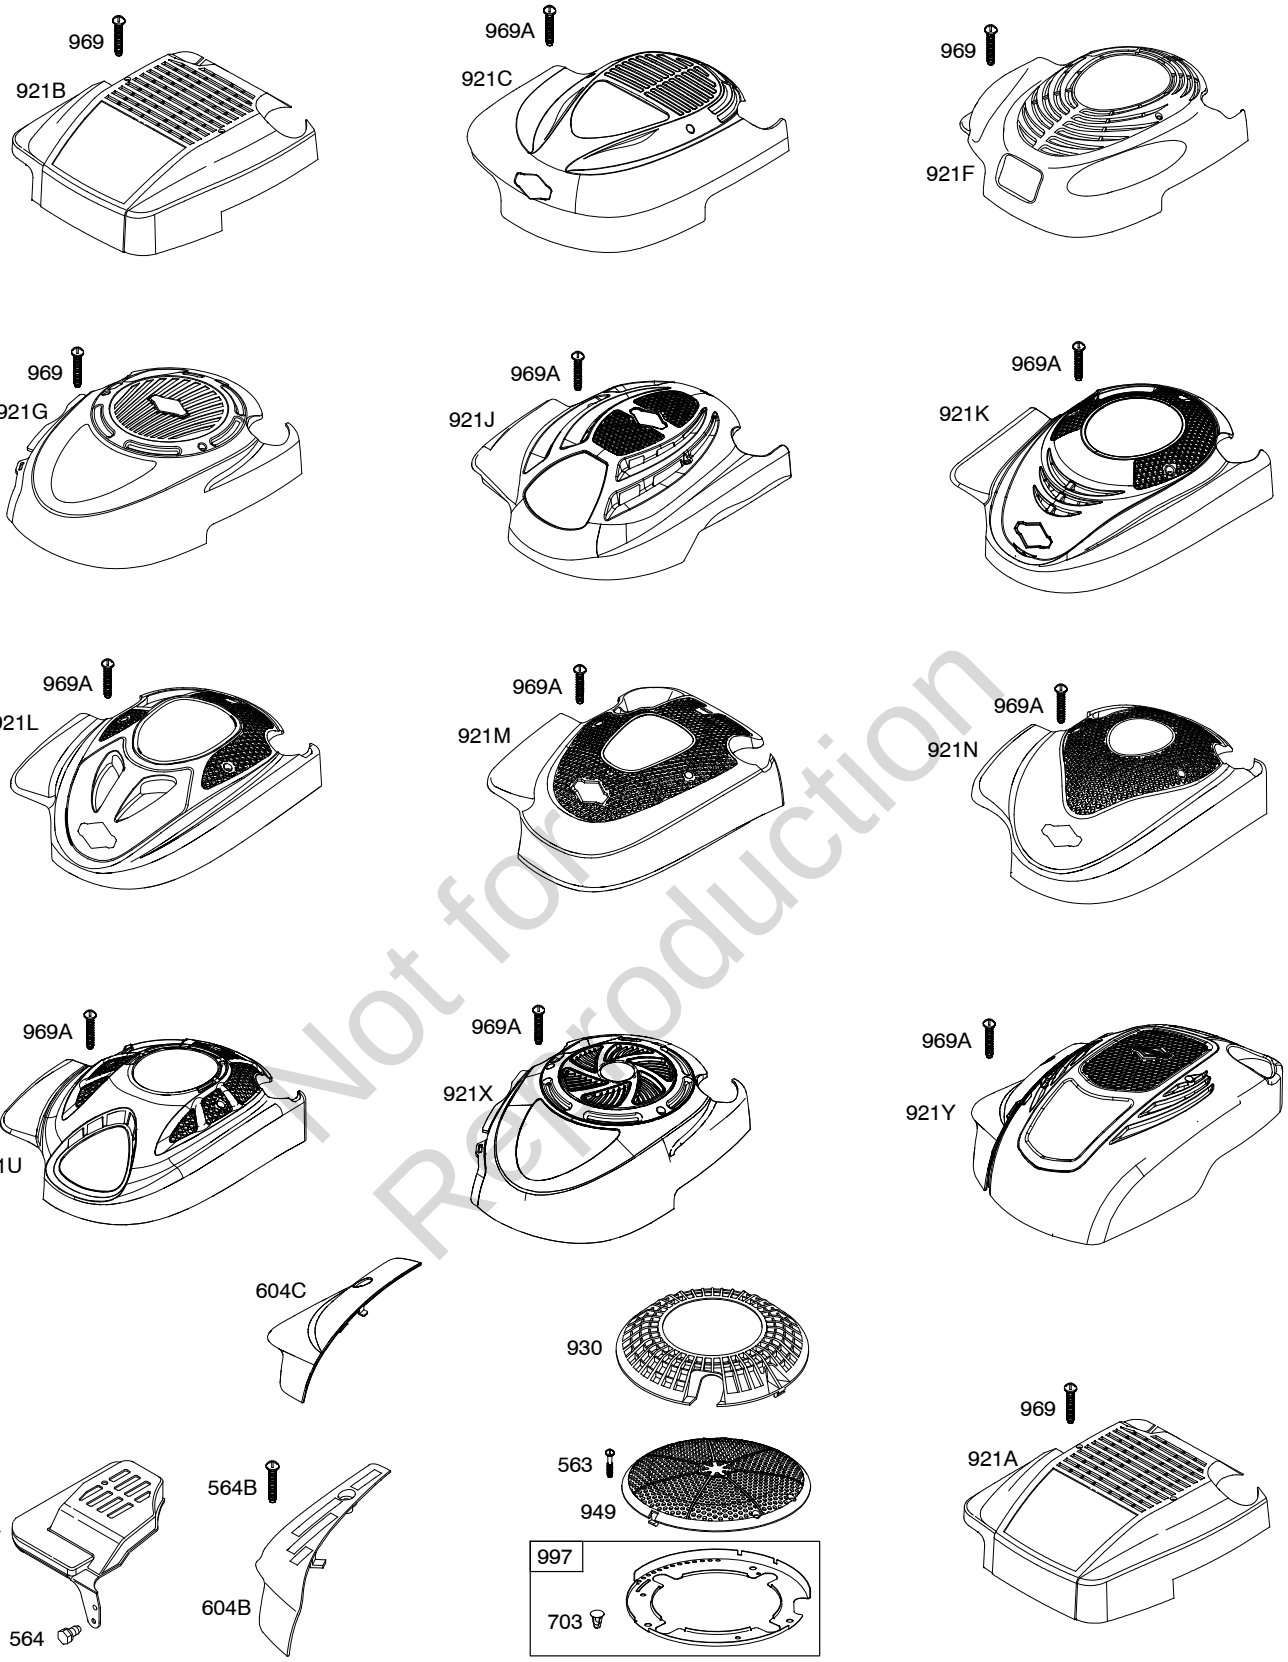

Not for Reproduction

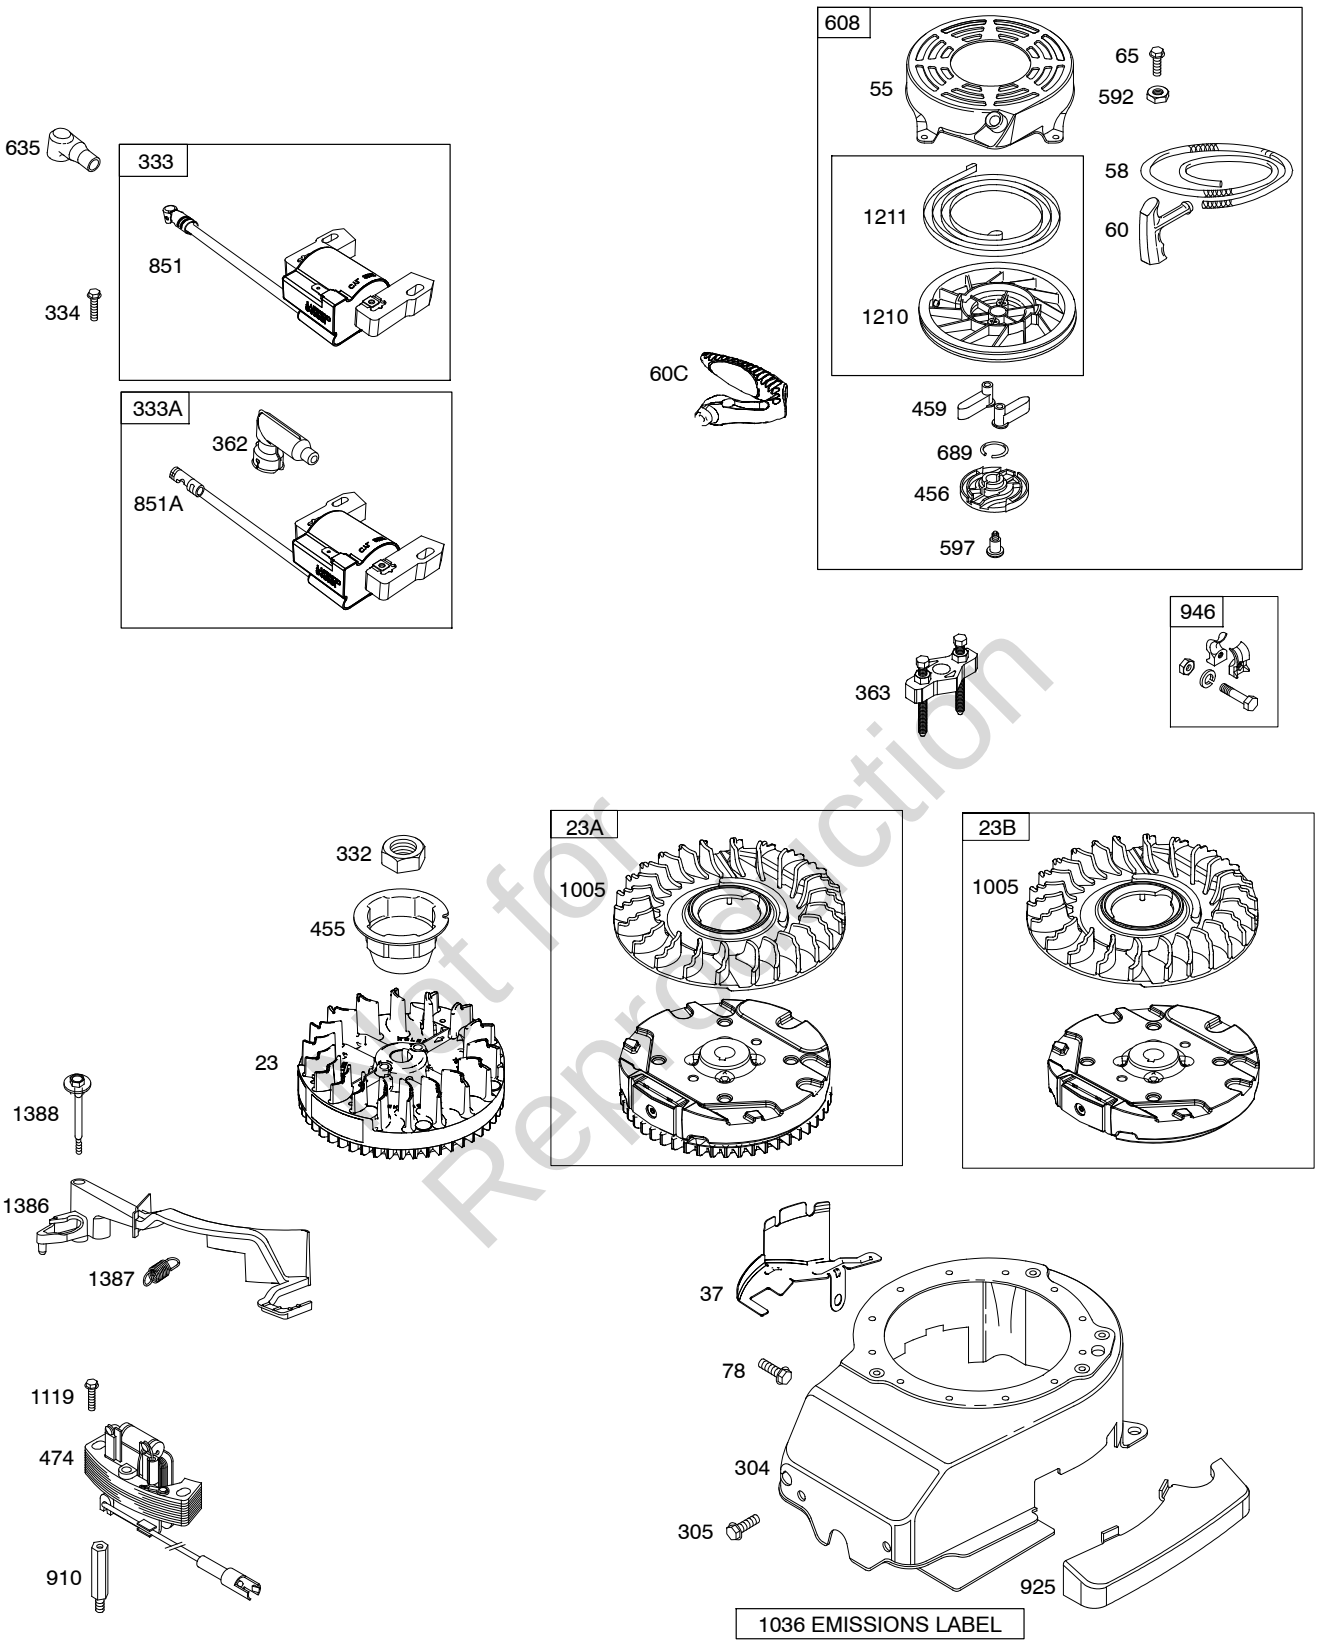

Not for Reproduction

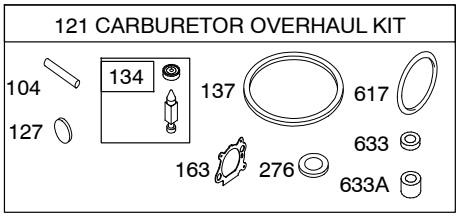

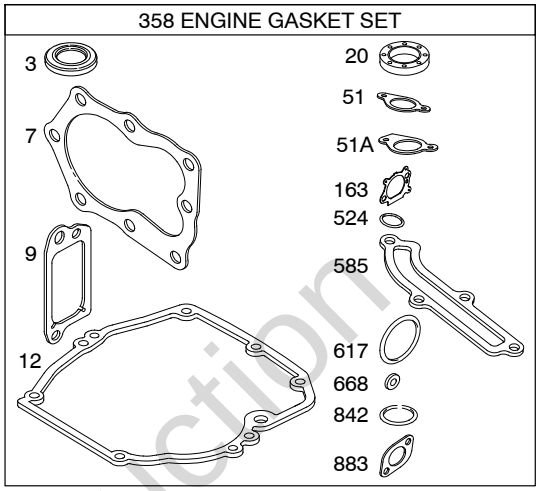

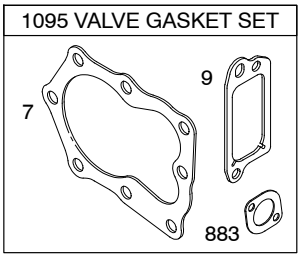

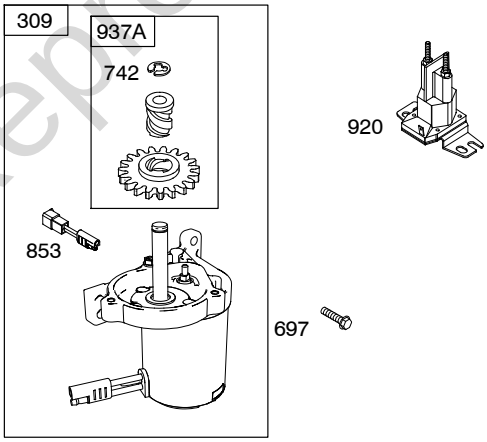

Not for Reproduction

126M00

REF. NO.	PART NO.	DESCRIPTION
1	592890	Cylinder Assembly
		------ Note ------
		592645 Cylinder Assembly Used on Type No(s). 0022.
2	796961	Kit-Bushing/Seal (Magneto Side)
3	299819s	Seal-Oil (Magneto Side)
4	493279	Sump-Engine
		------- Note -----
		498983 Sump-Engine Used on Type No(s). 0122, 0432, 1006, 1007.
5	590411	Head-Cylinder
7	799875	Gasket-Cylinder Head
8	590395	Breather Assembly
9	699833	Gasket-Breather
10	691125	Screw (Breather Assembly)
11	691781	Tube-Breather
11B	691923	Tube-Breather
12	692232	Gasket-Crankcase
13	590422	Screw (Cylinder Head)
15	690946	Plug-Oil Drain (External 7/16" Sq)
		------ Note ------
		691680 Plug-Oil, Drain (Internal 3/8" Square Socket)
16	797017	Crankshaft
		------- Note -----
		797018 Crankshaft Used on Type No(s). 0003, 0009, 0110, 0114, 0152, 0153, 0192, 0197, 0203, 0213, 0284, 0291, 0318, 0365, 0414, 0415, 0437, 0441, 0447, 0449, 0451, 1004, 1010, 1011, 1015, 1378, 1479, 1615, 5050, 5060, 5213, 5214, 5414, 5660.
		797372 Crankshaft Used on Type No(s). 0002, 0130, 0295, 0301, 0321, 0342, 0344, 0436, 0442, 0450, 1005, 1014.
		694850 Crankshaft Used on Type No(s). 0289, 0298, 0432, 1002.
		696290 Crankshaft Used on Type No(s). 0297, 0335.
		797019 Crankshaft Used on Type No(s). 0005, 0122, 0194, 0290, 0364, 0402, 0440, 0444, 1007, 1009, 1016.
		797681 Crankshaft Used on Type No(s). 0019, 0006, 0115, 0118, 0148, 0426, 0523, 1006, 1018, 6523.
		791061 Crankshaft Used on Type No(s). 1030.
		694478 Crankshaft Used on Type No(s). 0434, 0521, 6521.
		797020 Crankshaft Used on Type No(s). 1026.
		694079 Crankshaft Used on Type No(s). 1701.
		590808 Crankshaft Used on Type No(s). 0120, 0379.
		590807 Crankshaft Used on Type No(s). 0022, 0119, 0121, 0123, 0124, 0125, 0126, 0127, 0128, 0129, 0299, 0362, 0420, 1031, 3205, 3216, 3428, 3426, 3427.
		591159 Crankshaft Used on Type No(s). 0017, 0132, 0135.
20	399781s	Seal-Oil (PTO Side)
22	691092	Screw (Crankcase Cover/Sump)
23	691987	Flywheel
23A	591282	Flywheel Used on Type No(s). 0019, 0110, 0114, 0153, 0213, 0414, 0415, 5050, 5060, 5213, 5214, 5414.
23B	790536	Flywheel Used on Type No(s). 0002, 0003, 0005, 0006, 0009, 0017, 0115, 0118, 0120, 0122, 0130, 0132, 0135, 0148, 0152, 0192, 0194, 0289, 0295, 0297, 0298, 0301, 0321, 0335, 0342, 0344, 0364, 0365, 0379, 0426, 0432, 0436, 0440, 0441, 0442, 0450, 0451, 0523, 1002, 1004, 1005, 1006, 1007, 1010, 1014, 1030, 1378, 1479, 6523.
24	222698s	Key-Flywheel
25	590404	Piston Assembly (Standard)
		------- Note -----
		590405 Piston Assembly (.020" Oversize)
26	590402	Ring Set (Standard)
		------- Note -----
		590403 Ring Set (.020" Oversize)
27	691588	Lock-Piston Pin
28	298909	Pin-Piston
29	797306	Rod-Connecting
32	691664	Screw (Connecting Rod)
32A	695759	Screw (Connecting Rod)

Not for Reproduction

REF. NO.	PART NO.	DESCRIPTION
33	**590394**	Valve-Exhaust
34	**590393**	Valve-Intake
35	**691270**	Spring-Valve (Intake)
36	**691270**	Spring-Valve (Exhaust)
37	**793756**	Guard-Flywheel
40	**692194**	Retainer-Valve
43	**691997**	Slinger-Governor/Oil
		------ Note ------
		691486 Slinger-Governor/Oil Used on Type No(s). 0019.
45	**690548**	Tappet-Valve
46	**691449**	Camshaft
50A	**794305**	Manifold-Intake
51	**272199s**	Gasket-Intake
51A	**794306**	Gasket-Intake
54	**691650**	Screw (Intake Manifold)
55	**691421**	Housing-Rewind Starter
		------ Note ------
		697670 Housing Review Starter Used on Type No(s). 0003, 1378, 1479.
58	**697316**	Rope-Starter (Cut To Required Length)
60	**281434s**	Grip-Starter Rope
60C	**799716**	Grip-Starter Rope
65	**690837**	Screw (Rewind Starter)
78	**691108**	Screw (Flywheel Guard)
81	**691740**	Lock-Muffler Screw
95	**691636**	Screw (Throttle Valve)
97	**696565**	Shaft-Throttle (Plastic)
97A	**795881**	Shaft-Throttle Used on Type No(s). 0122, 0192, 0213, 1007, 5213.
98	**398185**	Kit-Idle Speed
98A	**493280**	Kit-Idle Speed
104	**797622**	Pin-Float Hinge
108	**691182**	Valve-Choke
		------- Note -----
		796993 Valve-Choke Used on Type No(s). 0019, 0115, 0148, 0152, 0153, 0156, 0297, 0335, 0426, 0431, 0434, 0436, 0440, 0521, 0523, 1005, 1006, 6521, 6523.
108A	**795935**	Valve-Choke
109	**494218**	Shaft-Choke Used on Type No(s). 0110, 0152, 0153.
109A	**498593**	Shaft-Choke
117	**590440**	Jet-Main (Standard)
117A	**799604**	Jet-Main (Standard) Used on Type No(s). 0003, 0005, 0006, 0007, 0009, 0114, 0118, 0197, 0203, 0289, 0290, 0291, 0298, 0365, 0414, 0415, 0432, 0441, 0444, 0447, 0449, 0451, 1010, 1011, 1015, 1016, 1018, 1025, 1026, 1378, 1479, 1701, 5050, 5060, 5062, 5214, 5414.
117B	**797574**	Jet-Main (Standard) Used on Type No(s). 0019, 0110, 0115, 0148, 0152, 0153, 0156, 0194, 0297, 0335, 0426, 0431, 0434, 0436, 0440, 0521, 0523, 1002, 1004, 1005, 1006, 6521, 6523.
117C	**798661**	Jet-Main (Standard) Used on Type No(s). 0122, 0192, 0213, 1007, 5213.
118	**798661**	Jet-Main (High Altitude)
118A	**799227**	Jet-Main (High Altitude) Used on Type No(s). 0003, 0005, 0006, 0007, 0009, 0114, 0118, 0197, 0203, 0289, 0290, 0291, 0298, 0365, 0414, 0415, 0432, 0441, 0444, 0447, 0449, 0451, 1010, 1011, 1015, 1016, 1018, 1025, 1026, 1378, 1479, 1701, 5050, 5060, 5062, 5214, 5414.
118B	**797575**	Jet-Main (High Altitude) Used on Type No(s). 0019, 0110, 0115, 0148, 0152, 0153, 0156, 0194, 0297, 0335, 0426, 0431, 0434, 0436, 0440, 0521, 0523, 1002, 1004, 1005, 1006, 6521, 6523.
118C	**798660**	Jet-Main (High Altitude) Used on Type No(s). 0122, 0192, 0213, 1007, 5213.

Not for Reproduction

126M00

REF. NO.	PART NO.	DESCRIPTION
121	**498260**	Kit-Carburetor Overhaul
125	**799866**	Carburetor (Autochoke System)
		------ Note ------
		592647 Carburetor (Mow n Stow) Used on Type No(s). 0022.
125A	**799868**	Carburetor (Primer System) Used on Type No(s). 0003, 0005, 0006, 0007, 0009, 0114, 0118, 0197, 0203, 0289, 0290, 0291, 0298, 0365, 0414, 0415, 0432, 0441, 0444, 0447, 0449, 0451, 1010, 1011, 1015, 1016, 1018, 1025, 1026, 1378, 1479, 1701, 5050, 5060, 5062, 5214, 5414.
125B	**799869**	Carburetor (Choke System) Used on Type No(s). 0019, 0115, 0148, 0156, 0194, 0297, 0335, 0426, 0431, 0434, 0436, 0440, 0521, 0523, 1002, 1004, 1005, 1006, 6521, 6523.
		------ Note ------
		799867 Carburetor (Choke System) Used on Type No(s). 0110, 0152, 0153.
125C	**799870**	Carburetor (Choke System) Used on Type No(s). 0122, 0192, 0213, 1007, 5213.
127	**694468**	Plug-Welch
130	**696564**	Valve-Throttle
130A	**691181**	Valve-Throttle Used on Type No(s). 0122, 0192, 0213, 1007, 5213.
133	**398187**	Float-Carburetor
134	**398188**	Kit-Needle/Seat
		------ Note ------
		593873 Kit-Needle-Seat (Mow n Stow) Used on Type No(s). 0022.
137	**796610**	Gasket-Float Bowl (1/8" Thick)
137A	**693981**	Gasket-Float Bowl (1/16" Thick)
141	**796193**	Shaft-Choke
163	**795629**	Gasket-Air Cleaner
187	**791766**	Line-Fuel (Cut to Required Length)
187A	**791873**	Line-Fuel (Molded)
187B	**791891**	Line-Fuel (Includes Filter)
188	**693399**	Screw (Control Bracket)
190	**690940**	Screw (Fuel Tank)
202	**691829**	Link-Mechanical Governor
209A	**795883**	Spring-Governor
209B	**699056**	Spring-Governor
		------- Note -----
		691292 Spring-Governor Used on Type No(s). 0123, 0125, 0127, 0290, 0299, 0402, 0420, 0444, 3426.
		691290 Spring-Governor Used on Type No(s). 0002, 0019, 0130, 0194, 0197, 0295, 0301, 0321, 0342, 0344, 0442, 0449, 0450, 1005, 1014.
		790944 Spring-Governor Used on Type No(s). 0148, 0523, 6523.
		795879 Spring-Governor Used on Type No(s). 0122, 0192, 0213, 1007, 5213.
		691291 Spring-Governor Used on Type No(s). 0003, 0006, 0009, 0114, 0156, 0203, 0289, 0291, 0297, 0298, 0335, 0365, 0414, 0426, 0431, 0432, 0434, 0436, 0440, 0441, 0447, 0451, 0521, 1002, 1006, 1010, 1011, 1378, 1479, 5050, 5214, 5414, 6521.
		691851 Spring-Governor Used on Type No(s). 0004, 0005, 0007, 0018, 0108, 0111, 0115, 0118, 0364, 0415.
		793007 Spring-Governor Used on Type No(s). 0152, 0153.
		691852 Spring-Governor Used on Type No(s). 0011, 0022, 0119, 0120, 0121, 0124, 0126, 0128, 0129.
		799505 Spring-Governor Used on Type No(s). 0110.
217	**690354**	Spring-Choke Return
222	**790143**	Bracket-Control (Remote/Manual Friction)(Primer) Used on Type No(s). 0003, 0005, 0009, 0129, 0289, 0291, 0298, 0365, 0432, 0441, 0442, 0444, 0449, 0451, 1010, 1011, 1479, 5050, 5214.
222A	**692021**	Bracket-Control (Remote, Choke A Matic) Used on Type No(s). 0152, 0153.
222B	**790982**	Bracket-Control Used on Type No(s). 0110.

Not for Reproduction

REF. NO.	PART NO.	DESCRIPTION
222C	**692150**	Bracket-Control (Variable Speed) (5 Position Manual Choke) Used on Type No(s). 0019, 0115, 0194, 0436, 0440.
222D	**793754**	Bracket-Control (Fixed Speed) Used on Type No(s). 0364.
222E	**692982**	Bracket-Control (Manual Friction, 5 Position Manual Choke) Used on Type No(s). 0148, 0523.
222F	**795880**	Bracket-Control Used on Type No(s). 0122, 0192, 0213, 1007, 5213.
222G	**593542**	Bracket-Control Used on Type No(s). 0002, 0004, 0006, 0011, 0017, 0111, 0114, 0118, 0130, 0132, 0135, 0197, 0203, 0290, 0295, 0301, 0321, 0342, 0344, 0402, 0414, 0415, 0437, 0447, 0450, 1009, 1014, 1015, 1016, 1018, 1025, 1026, 1031, 1378, 1615, 1625, 1701, 5060, 5062, 5414, 5660, 5662.
222H	**593541**	Bracket-Control Used on Type No(s). 6523.
222J	**593823**	Bracket-Control Used on Type No(s). 0156, 0297, 0335, 0426, 0431, 0434, 0521, 1002, 1004, 1005, 1006, 6521.
222K	**593582**	Bracket-Control (Fixed Speed)
227	**690783**	Lever-Governor Control
236	**691826**	Link-Lockout
240	**298090s**	Fuel-Filter
265	**690798**	Clamp-Casing
265A	**691024**	Clamp-Casing
265B	**692179**	Clamp-Casing
267	**691044**	Screw (Casing Clamp)
268	**691025**	Casing-Control Wire (Cut to Required Length)
269	**691026**	Wire-Control (Cut to Required Length)
270	**691027**	Nut (Control Wire Casing)
271	**691028**	Lever-Control
276	**271716**	Washer-Sealing
276A	**797632**	Washer-Sealing
287	**690940**	Screw (Dipstick Tube)
291	**593208**	Thermostat
300	**593581**	Muffler (Used After Code Date 13121500). **------- Note -----** **790828** Muffler (Used Before Code Date 13121600). **593819** Muffler (Used After Code Date 13121500). Used on Type No(s). 0003, 0005, 0006, 0009, 0110, 0114, 0115, 0118, 0122, 0148, 0152, 0153, 0156, 0192, 0194, 0197, 0203, 0213, 0289, 0290, 0291, 0297, 0298, 0335, 0365, 0414, 0415, 0426, 0431, 0432, 0434, 0440, 0441, 0444, 0447, 0449, 0451, 0521, 0523, 1002, 1004, 1005, 1006, 1007, 1010, 1011, 1015, 1016, 1018, 1025, 1026, 1378, 1479, 1701, 5050, 5060, 5062, 5213, 5214, 6521, 6523. **692038** Muffler Used on Type No(s). 0019. **692038** Muffler (Used Before Code Date 13121600). Used on Type No(s). 0003, 0005, 0006, 0009, 0110, 0114, 0115, 0118, 0122, 0148, 0152, 0153, 0156, 0192, 0194, 0197, 0203, 0213, 0289, 0290, 0291, 0297, 0298, 0335, 0365, 0414, 0415, 0426, 0431, 0432, 0434, 0440, 0441, 0444, 0447, 0449, 0451, 0521, 0523, 1002, 1004, 1005, 1006, 1007, 1010, 1011, 1015, 1016, 1018, 1025, 1026, 1378, 1479, 1701, 5050, 5060, 5062, 5213, 5214, 6521, 6523.
304	**790826**	Housing-Blower **------- Note -----** **493294** Housing-Blower Used on Type No(s). 0003, 0005, 0006, 0009, 0019, 0110, 0114, 0115, 0118, 0122, 0148, 0152, 0153, 0156, 0192, 0194, 0197, 0213, 0289, 0297, 0298, 0335, 0365, 0414, 0415, 0426, 0431, 0432, 0434, 0436, 0440, 0441, 0449, 0451, 0521, 0523, 1002, 1004, 1005, 1006, 1007, 1010, 1378, 1479, 5050, 5213, 5214, 5414, 6521, 6523.

Not for Reproduction

126M00

REF. NO.	PART NO.	DESCRIPTION
		695892 Housing-Blower Used on Type No(s). 0203, 0290, 0291, 0444, 0447, 1011, 1015, 1016, 1018, 1025, 1026, 1701, 5060, 5062.
		791291 Housing-Blower Used on Type No(s). 0002, 0017, 0120, 0130, 0135, 0295, 0301, 0321, 0342, 0344, 0364, 0379, 0442, 0450, 1014, 1030.
305	**691108**	Screw (Blower Housing)
306	**690450**	Shield-Cylinder
306A	**790836**	Shield-Cylinder
307	**690345**	Screw (Cylinder Shield)
309	**799045**	Motor-Starter
332	**690662**	Nut (Flywheel)
333	**590454**	Armature-Magneto
333A	**590455**	Armature-Magneto Used on Type No(s). 0003, 0015, 0017, 0019, 0022, 0119, 0120, 0121, 0123, 0124, 0126, 0127, 0128, 0129, 0131, 0132, 0135, 0192, 0303, 0318, 0344, 0365, 0426, 0436, 0675-F3, 1002, 1004, 1005, 1006, 1007, 1009, 1010, 1011, 1014, 1015, 1016, 1018, 1025, 1026, 1030, 1031, 1576, 1615, 1625, 1701, 5050, 5060, 5062, 5213-F1, 5214, 5660, 5662.
334	**691061**	Screw (Magneto Armature)
337	**593941**	Plug-Spark (Resistor) **------ Note ------** **591910** Plug-Spark Used on Type No(s). 0001, 0017, 0020, 0132, 0135, 0303, 0345, 0366, 0482, 0782, 1225, 1252, 1346, 1347, 1349, 1350, 1409, 1414, 1415, 1443, 1445, 1446, 1462, 1525, 1561, 6782, 6863. **796560** Plug-Spark Used on Type No(s). 0015. (Platinum, Resistor)
346	**593440**	Screw (Spark Arrester) (Self Drilling) (Thread Forming)
347	**691396**	Switch-Rocker
356	**692390**	Wire-Stop
356B	**693010**	Wire-Stop
356D	**496381**	Wire-Stop
356H	**690791**	Wire-Stop
356K	**696030**	Wire-Stop
358	**590508**	Gasket Set-Engine
362	**793351**	Boot-Spark Plug
363	**19069**	Flywheel Puller
365	**691688**	Screw (Carburetor)
383	**89838s**	Wrench-Spark Plug
404	**690272**	Washer (Governor Crank)
425A	**690670**	Screw (Air Cleaner Cover)
443A	**692523**	Screw (Air Cleaner Primer Base)
445A	**491588s**	Filter-Air Cleaner Cartridge
455	**791960**	Cup-Flywheel
456	**692299**	Plate-Pawl Friction
459	**281505s**	Plate-Ratchet
467	**790842**	Knob-Air Cleaner Cover
474	**691991**	Alternator
497	**690664**	Screw (Stop Switch Bracket)
500	**691086**	Washer (Key Switch)
505	**691251**	Nut (Governor Control Lever)
523	**499621**	Dipstick
524	**692296**	Seal-Dipstick Tube
525	**495265**	Tube-Dipstick
525A	**593806**	Tube-Dipstick (Mow N Stow™)
534A	**798294**	Screw (Air Cleaner)
535	**493537s**	Filter-Pre Cleaner
535A	**797301**	Filter-Air Cleaner Foam
536A	**798293**	Cleaner-Air (Used Before Code Date 14012700).
562	**691119**	Bolt (Governor Control Lever)
563	**691138**	Screw (Debris Guard Screen)
564	**690664**	Screw (Control Cover)

Not for Reproduction

REF. NO.	PART NO.	DESCRIPTION
564B	**698589**	Screw (Control Cover)
578	**698153**	Wire-Assembly
578A	**695283**	Wire-Assembly
584	**697734**	Cover-Breather Passage
585	**691879**	Gasket-Breather Passage
592	**690800**	Nut (Rewind Starter)
597	**691696**	Screw (Pawl Friction Plate)
598	**592587**	Shim-End Play (0.012" Thick)
601	**791850**	Clamp-Hose
601A	**691038**	Clamp-Hose
604	**691757**	Cover-Control
604B	**790703**	Cover-Control
604C	**792418**	Cover-Control
608	**497680**	Starter-Rewind
		------- Note -----
		697671 Starter-Rewind Used on Type No(s). 0003, 1378, 1479.
613	**691340**	Screw (Muffler) (1/4-20 x 2.75" Lg, 2.25" Shoulder Lg)
		------- Note -----
		790833 Screw (Muffler) (1/4-20 x 2.75" Lg, 2.08" Shoulder Lg)
615	**690340**	Retainer-Governor Shaft
616	**698801**	Crank-Governor
		------ Note ------
		593871 Crank-Governor (Mow N Stow™)
617	**270344s**	Seal-O Ring (Intake Manifold)
621	**692310**	Switch-Stop
627	**792565**	Bracket-Stop Switch
627A	**793211**	Bracket-Stop Switch
633	**691321**	Seal-Choke/Throttle Shaft
633A	**693867**	Seal-Choke/Throttle Shaft
635	**66538s**	Boot-Spark Plug
664	**691087**	Nut (Key Switch)
668	**493823**	Spacer
670	**692294**	Spacer-Fuel Tank
676	**396548**	Deflector-Muffler
676A	**393756**	Deflector-Muffler
676B	**397931**	Deflector-Muffler
676C	**493871**	Deflector-Muffler
676E	**393760**	Deflector-Muffler
676F	**590745**	Deflector-Muffler
677	**690661**	Screw (Muffler Deflector) (Thread Forming)
677A	**593440**	Screw (Self Drilling) (Thread Forming)
684	**690345**	Screw (Breather Passage Cover)
689	**691855**	Spring-Friction
691	**593837**	Seal-Governor Shaft
692	**590931**	Spring-Detent (Used After Code Date 12120500).
		------ Note ------
		690572 Spring Detent (Used Before Code Date 12120600).
697	**691127**	Screw (Drive Cap) (1/4-20 x .81" lg)
703	**696309**	Clip
718	**690959**	Pin-Locating
725	**590459**	Shield-Heat
725A	**590460**	Shield-Heat
741	**797521**	Gear-Timing (Metal)
742	**93941**	Retainer-E Ring
745	**691648**	Screw (Brake)
789B	**792685**	Harness-Wiring
		------- Note -----
		696546 Harness-Wiring Used on Type No(s). 0110, 0153, 5050.
789C	**796385**	Harness-Wiring
789D	**796574**	Harness-Wiring
789E	**594392**	Harness-Wiring
789F	**594393**	Harness-Wiring
832	**590486**	Guard-Muffler
832E	**793568**	Guard-Muffler
836	**690664**	Screw (Muffler Guard)
836C	**790745**	Screw (Muffler Guard)
842	**691031**	Seal-O Ring (Dipstick Tube)
843	**691884**	Sleeve-Lever (Speed Control)
843A	**691895**	Sleeve-Lever (Choke)
847	**692047**	Dipstick/Tube Assembly
847A	**593808**	Dipstick/Tube Assembly (Mow N Stow™)
851	**493880s**	Terminal-Spark Plug
851A	**692424**	Terminal-Spark Plug
853	**695268**	Adapter-Wire
853A	**695897**	Adapter-Wire
868	**590410**	Seal-Valve
869	**691155**	Seat-Valve (Intake)
870	**690380**	Seat-Valve (Exhaust)

Not for Reproduction

126M00

REF. NO.	PART NO.	DESCRIPTION
871	**590409**	Bushing-Valve Guide
875	**593580**	Base-Air Cleaner (Used After Code Date 14012600).
		------ Note ------
		593580 Base-Air Cleaner Primer (Used After Code Date 14020200). Used on Type No(s). 0004, 0011, 0017, 0020, 0111, 0132, 0135, 0295, 0301, 0437, 1009, 1014, 1031, 1615, 1625, 5660, 5662.
		593580 Base-Air Cleaner Primer (Used After Code Date 14041300). Used on Type No(s). 0018, 0110, 0122, 0152, 0153, 0192, 0213, 0364, 1007, 5213.
		593832 Base-Air Cleaner (Auto Choke)(Mow N Stow™) Used on Type No(s). 0022.
883	**691881**	Gasket-Exhaust
883A	**793497**	Gasket-Exhaust
892	**690646**	Switch-Key
910	**691094**	Stud (Alternator)
920	**691656**	Solenoid-Starter
921A	**796921**	Cover-Blower Housing Used on Type No(s). 0010, 0136, 0137, 0988.
921B	**692931**	Cover-Blower Housing
921C	**695889**	Cover-Blower Housing
921F	**697343**	Cover-Blower Housing
921G	**795064**	Cover-Blower Housing
921J	**790036**	Cover-Blower Housing
921K	**699984**	Cover-Blower Housing
921L	**791026**	Cover-Blower Housing
921M	**792652**	Cover-Blower Housing
921N	**792675**	Cover-Blower Housing
921U	**794355**	Cover-Blower Housing
921X	**796706**	Cover-Blower Housing
921Y	**591955**	Cover-Blower Housing
922A	**692135**	Spring-Brake
923	**796136**	Brake (Rewind Starter)
923A	**796387**	Brake (Electric Starter)
925	**795403**	Cover-Linkage
930	**691919**	Guard-Rewind
937A	**799420**	Spline-Starter
946	**691738**	Stop-Rope
949	**696306**	Guard-Debris Screen
957	**799585**	Cap-Fuel Tank (Black) (1/4 Turn)
		------ Note ------
		591003 Cap-Fuel Tank (Red) (1/4 Turn)
957A	**692046**	Cap-Fuel Tank (Black) (Threaded)
957D	**796577**	Cap-Fuel Tank (Black) (Threaded)
958	**698183**	Valve-Fuel Shut Off
966A	**593942**	Base-Air Cleaner Primer (Used After Code Date 14020200). Used on Type No(s). 0003-F1, 0005, 0006, 0009, 0114, 0118, 0289, 0291, 0298, 0365, 0432, 0444, 0449, 0451, 1010, 1011, 1015, 1016, 1018, 1025, 1026, 1479-F1, 1701, 5050, 5060, 5062, 5214.
		------ Note ------
		593942 Base-Air Cleaner Primer (Used After Code Date 14012600). Used on Type No(s). 0003-F4, 1479-F4.
966B	**795259**	Base-Air Cleaner Primer (Used Before Code Date 14012700)
		------ Note ------
		795259 Base-Air Cleaner Primer (Used Before Code Date 14020300) Used on Type No(s). 0003, 0004, 0005, 0006, 0009, 0011, 0111, 0114, 0118, 0132, 0135, 0289, 0291, 0295, 0301, 0365, 0402, 0437, 0444, 0449, 0451, 1009, 1010, 1011, 1014, 1031, 1479, 1615, 1625, 5050, 5214, 5660, 5662.
		795259 Base-Air Cleaner Primer (Used Before Code Date 14041400) Used on Type No(s). 0110, 0122, 0152, 0153, 0192, 0213, 0290, 0364, 1007, 5213.
966D	**593945**	Base-Air Cleaner (Used After Code Date 14012600).
968B	**692298**	Cover-Air Cleaner
969	**690700**	Screw (Blower Housing Cover)
969A	**691138**	Screw (Blower Housing Cover)
972B	**699374**	Tank-Fuel (Plastic)(Threaded)
972E	**796578**	Tank-Fuel (Plastic)(Threaded) (Flourinated)
972F	**590490**	Tank-Fuel (Plastic)(1/4 Turn)

Not for Reproduction

REF. NO.	PART NO.	DESCRIPTION
975	**796611**	Bowl-Float
976	**694395**	Primer-Carburetor
990	**691959**	Key Set
994	**398067**	Arrestor-Spark
997	**696310**	Shield-Debris
1005	**691346**	Fan-Flywheel
1036		Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)
1059	**692311**	Kit-Screw/Washer
1095	**590507**	Gasket Set-Valve
1119	**692979**	Screw (Alternator)
1210	**498144**	Pulley/Spring Assembly (Pulley)
1211	**498144**	Pulley/Spring Assembly (Spring)
1319	**794467**	Label-Warning
1330	**270962**	Manual-Repair
1386	**790848**	Vane-Air (Autochoke System)
1387	**790849**	Spring-Air Vane
1388	**790850**	Screw (Air Vane)

Not for Reproduction

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction